


Heater Core

HVAC SYSTEM (HEATER, VENTILATOR AND A/C)


11.Heater Core

A: REMOVAL

- 1) Disconnect the ground cable from the battery.
- 2) Draw out the refrigerant with the refrigerant recovery unit. <Ref. to AC-20, PROCEDURE, Refrigerant Recovery Procedure.>
- 3) Remove the heater and cooling unit. <Ref. to AC-35, REMOVAL, Heater and Cooling Unit.>
- 4) Remove the screws and remove the heater core cover and pipe clamp.

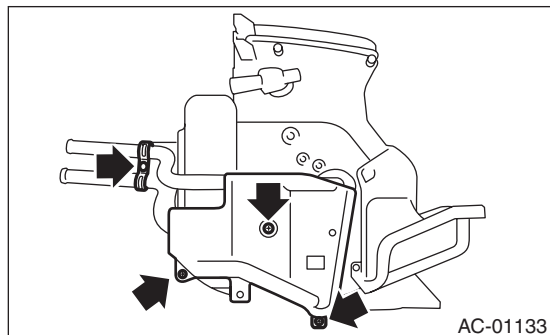

- 5) Remove the heater core (A).

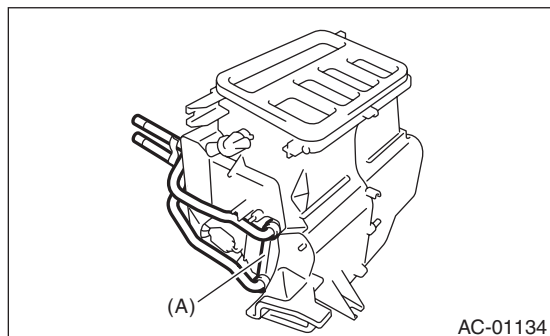

B: INSTALLATION

Install in the reverse order of removal.