

6. Read Diagnostic Trouble Code (DTC)

A: OPERATION

1. ECM

- 1) On the «Main Menu» display, select {Each System Check}.
- 2) On the «System Selection Menu», select {Engine Control System}.
- 3) After engine type information is displayed, select [OK].
- 4) On the «Engine Diagnosis», select {Diagnostic Code(s) Display}.
- 5) On the «Diagnostic Code(s) Display», select {Current DTC} or {Past DTC}.

NOTE:

- For detailed operation procedure, refer to the “PC application help for Subaru Select Monitor”.
- For detailed concerning DTC, refer to the List of Diagnostic Trouble Codes (DTC). <Ref. to IM(diag)-14, LIST, List of Diagnostic Trouble Code (DTC).>

2. BODY INTEGRATED UNIT

- 1) On the «Main Menu» display, select {Each System Check}.
- 2) On the «System Selection Menu», select {Integ. Unit Mode}.
- 3) After {Integ. Unit Mode} is displayed, select [OK].
- 4) On the «Integ. unit mode failure diag», select {Diagnostic Code(s) Display}.

NOTE:

- For detailed operation procedure, refer to the “PC application help for Subaru Select Monitor”.
- For detailed concerning DTC, refer to the List of Diagnostic Trouble Codes (DTC). <Ref. to IM(diag)-14, LIST, List of Diagnostic Trouble Code (DTC).>