

## 7. Engine Coolant Temperature Gauge

### A: SPECIFICATION

Since the visor assembly cannot be disassembled, do not remove or inspect the temperature gauge alone. (Do not remove the cover on the back surface.)