

# General Description

## LIGHTING SYSTEM

### 1. General Description

#### A: SPECIFICATION

Headlight	Halogen type low beam	12 V — 55 W
	HID type low beam	12 V — 35 W
	Halogen type high beam	12 V — 60 W
Front turn signal, parking		12 V — 28/8 W
Front side marker light		12 V — 5 W
Front fog light		12 V — 55 W
Side turn signal light		12 V — 1.4 W (LED)
Rear combination light	Stop/Tail light/Rear side marker light	12 V — 27/8 W
	Turn signal light	12 V — 27 W
Rear finisher light		12 V — 5 W
Back-up light		12 V — 16 W
License plate light		12 V — 5 W
High-mounted stop light		12 V — 1.2 W (LED)
Room light		12 V — 8 W (Model without rear entertainment system)
		12 V — 5 W (Model with rear entertainment system)
Spot map light		12 V — 8 W
Luggage room light		12 V — 13 W
Rear gate light		12 V — 5 W
Glove box light		12 V — 1.4 W
Door step light		12 V — 3 W
Vanity mirror light		12 V — 3 W

#### B: CAUTION

- Before removing or installing parts, always disconnect the battery ground cable from battery. When replacing the audio, control module and other parts provided with memory functions, record the memory contents before disconnecting the battery ground cable. Otherwise, the memory is cleared.
- Reassemble the parts in the reverse order of disassembly procedure unless otherwise indicated.
- Adjust parts to the given specifications.
- Connect the connectors securely during reassembly.
- After reassembly, make sure functional parts operate smoothly.

#### WARNING:

- The airbag system wiring harness is routed near electrical parts and switches. The airbag system wiring harnesses and connectors are colored yellow. Do not use the electrical test equipment on these circuits.
- Be careful not to damage the airbag system wiring harness when servicing electrical parts and switches.

## C: PREPARATION TOOL

### 1. GENERAL TOOL

TOOL NAME	REMARKS
Circuit tester	Used for measuring resistance and voltage.