



## 20. Rear Combination Light Assembly

### A: REMOVAL

- 1) Disconnect the ground cable from the battery.
- 2) Remove the cover.

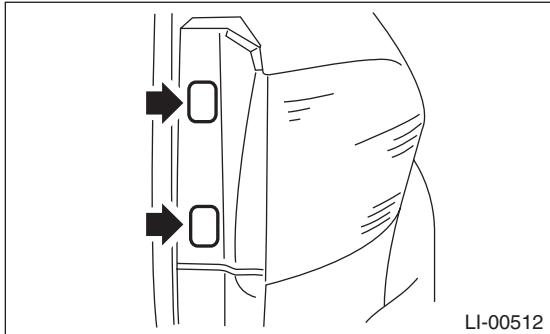

- 3) Remove the two bolts, and then detach the rear combination light by pulling it to the rear side of vehicle.

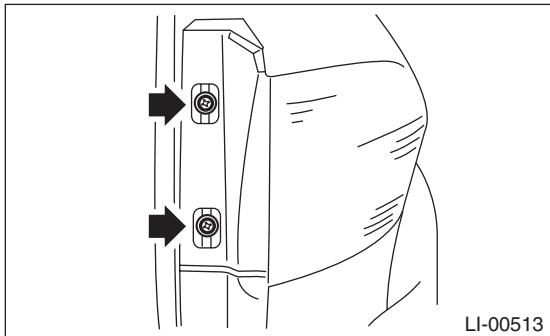

- 4) After turning the sockets of the tail/stop light bulbs and rear turn signal light bulbs, remove the rear combination light.

### B: INSTALLATION

Install in the reverse order of removal.

***Tightening torque:***

***7.5 N·m (0.76 kgf·m, 5.5 ft-lb)***