



24. Rear Finisher Light Assembly

A: REMOVAL

- 1) Remove the bulb inspection cover (A) of the rear gate trim.

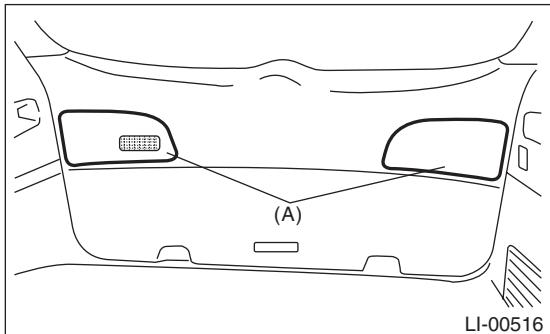

- 2) Disconnect the harness connector.
- 3) Remove the mounting nuts and detach the rear finisher assembly.

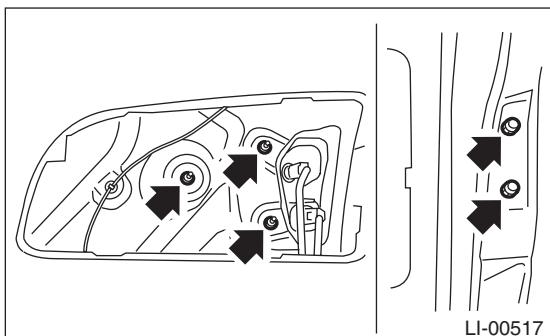

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

4.5 N·m (0.46 kgf·m, 3.3 ft-lb)