


Combination Switch (Light)

LIGHTING SYSTEM


9. Combination Switch (Light)

A: REMOVAL

- 1) Disconnect the ground cable from the battery.
- 2) Remove the screws and remove the steering column covers (upper and lower).

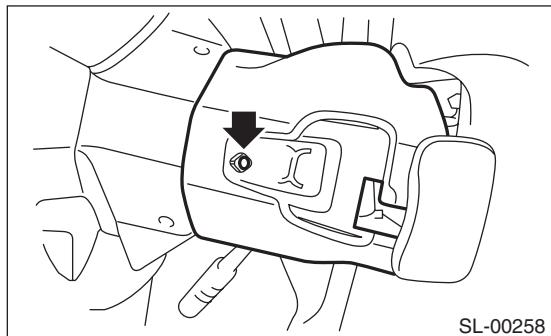

- 3) Disconnect the connector from the combination switch.
- 4) Remove the screws which secure the switch, then remove the combination switch.

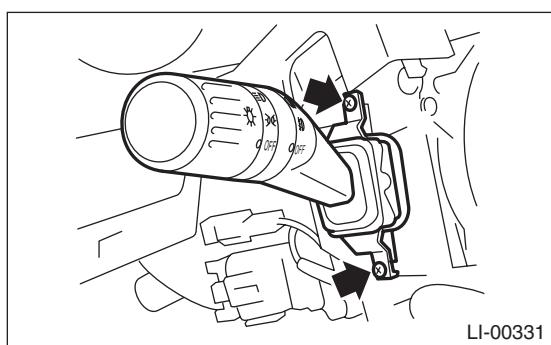


B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

Measure the resistance between combination switch terminals.

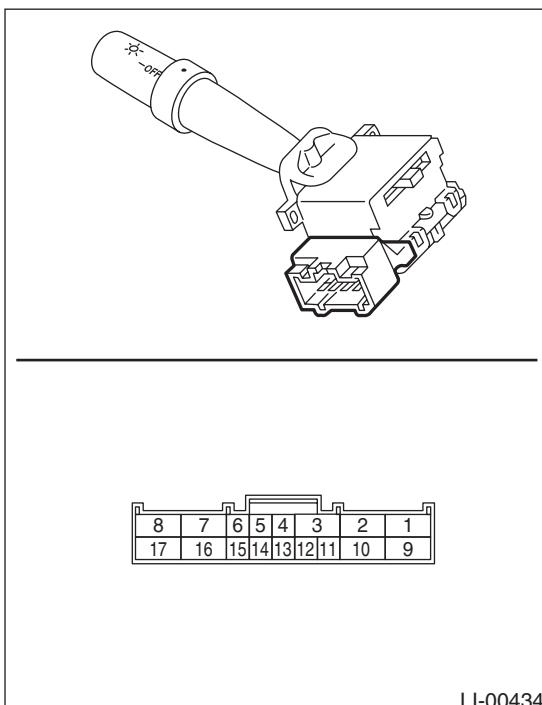

1. LIGHTING SWITCH

Switch position	Terminal No.	Standard
OFF	—	1 MΩ or more
Tail	14 and 16	Less than 1 Ω
Head	13, 14 and 16	Less than 1 Ω

2. DIMMER & PASSING SWITCH

Switch position	Terminal No.	Standard
Passing	7, 8 and 16	Less than 1 Ω
Low beam	17 and 16	Less than 1 Ω
High beam	7 and 16	Less than 1 Ω

3. TURN SIGNAL SWITCH

Switch position	Terminal No.	Standard
Left	1 and 2	Less than 1 Ω
Neutral	—	1 MΩ or more
Right	2 and 3	Less than 1 Ω

4. FRONT FOG LIGHT SWITCH

Switch position	Terminal No.	Standard
OFF	—	1 MΩ or more
ON	10 and 11	Less than 1 Ω