


### 10.Rear Outer Handle

#### A: REMOVAL

- 1) Raise the rear door glass to the top position.
- 2) Disconnect the ground cable from battery.
- 3) Remove the rear door trim. <Ref. to EI-36, REMOVAL, Door Trim.>
- 4) Remove the cable from rear inner remote. <Ref. to SL-37, REMOVAL, Rear Inner Remote.>
- 5) Remove the sealing cover. <Ref. to EB-20, NOTE, Rear Sealing Cover.>
- 6) Loosen the bolt (1) and turn bolt (2) twice.

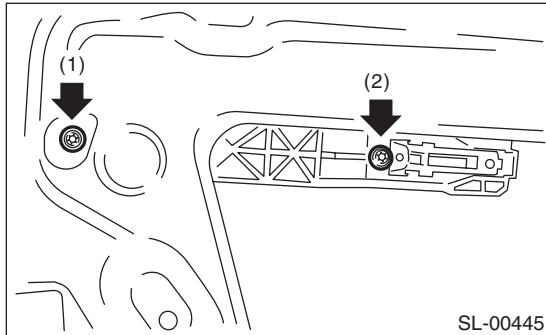

- 7) Detach the outer handle cover.
- 8) Move the rear outer handle towards the rear, and remove the rear outer handle.

#### CAUTION:

**Do not apply excessive force to remove the handle from door panel, not to deform the door panel.**

- 9) Remove the outer side spacer, and slide the frame assembly forward from the inner side, then remove.

#### B: INSTALLATION

Install in the reverse order of removal.

#### **Tightening torque:**

**<Ref. to SL-2, DOOR LOCK ASSEMBLY, COMPONENT, General Description.>**

#### C: INSPECTION

- 1) Inspect to make sure that the latch is in secure contact.
- 2) Check the handle and cable for smooth operation.