

## **Inspection Mode**

BRAKE VACUUM CONTROL (BVC) (DIAGNOSTICS)

---

### **8. Inspection Mode**

#### **A: PROCEDURE**

Reproduce the malfunction occurrence condition  
as much as possible.

Drive the vehicle at least ten minutes.