

General Diagnostic Table

TIRE PRESSURE MONITORING SYSTEM (DIAGNOSTICS)

12.General Diagnostic Table

A: INSPECTION

Symptom		Problem parts
Tire pressure warning light illuminates.	Tire pressure is reduced.	<ul style="list-style-type: none">• Improper tire pressure adjustment• Punctured tire
Tire pressure warning light blinks 25 times and then illuminates.	Tire pressure monitoring system has malfunction.	<ul style="list-style-type: none">• Air pressure sensor malfunction• Air pressure sensor is out of battery.• Tire pressure monitoring control module is faulty.• Defective combination meter• Defective vehicle harness
Tire pressure is dropping but the warning light does not illuminate.	Tire pressure warning light does not illuminate.	<ul style="list-style-type: none">• Air pressure sensor malfunction• Tire pressure monitoring control module is faulty.• Defective combination meter

General Diagnostic Table

TIRE PRESSURE MONITORING SYSTEM (DIAGNOSTICS)

DIFFERENTIALS

DI

	Page
1. General Description	2
2. Differential Gear Oil	16
3. Front Differential Assembly	17
4. Rear Differential (VA-type)	18
5. Rear Differential Front Oil Seal	36
6. Rear Differential Side Oil Seal	38
7. Rear Differential Front Member	39
8. Rear Differential Mount Bushing	40
9. General Diagnostic Table	41