

## 9. Radiator Sub Fan and Fan Motor


### A: REMOVAL

Refer to the radiator main fan and fan motor. <Ref. to CO(H6DO)-22, REMOVAL, Radiator Main Fan and Fan Motor.>

### B: INSTALLATION


Refer to the radiator main fan and fan motor. <Ref. to CO(H6DO)-23, INSTALLATION, Radiator Main Fan and Fan Motor.>

**Tightening torque:**  
6.3 N·m (0.6 kgf-m, 4.6 ft-lb)

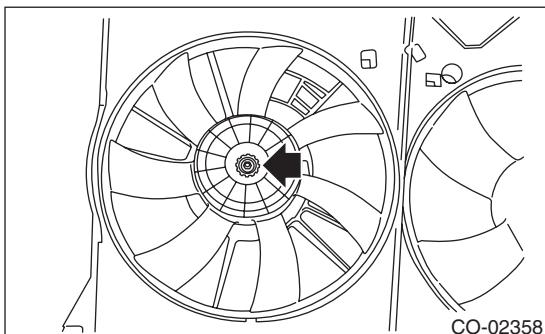


### C: DISASSEMBLY

- 1) Remove the radiator sub fan.

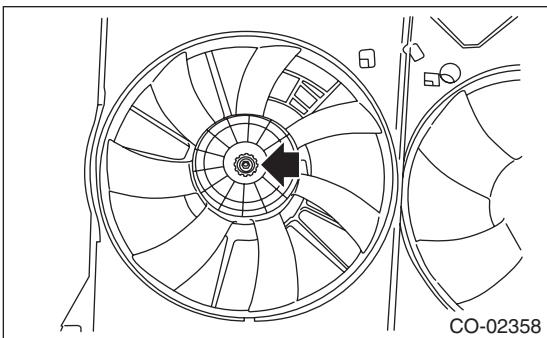

- 2) Remove the radiator sub fan motor.

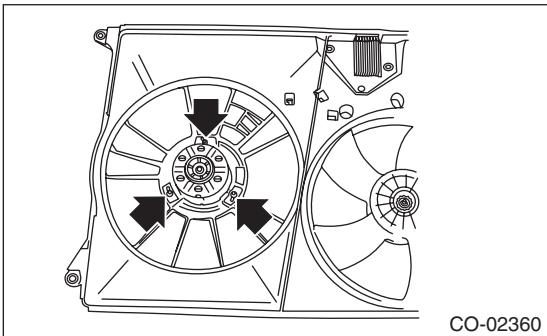

### D: ASSEMBLY

Assemble in the reverse order of disassembly.

**Tightening torque:**  
3.8 N·m (0.4 kgf-m, 2.8 ft-lb)

