

12.Drain Valve

A: SPECIFICATION

Canister is a non-disassembled part, so do not remove the drain valve from canister. Refer to "Canister" for removal and installation procedure. <Ref. to EC(H6DO)-6, REMOVAL, Canister.> <Ref. to EC(H6DO)-6, INSTALLATION, Canister.>