


PCV Valve

EMISSION CONTROL (AUX. EMISSION CONTROL DEVICES)


13.PCV Valve

A: REMOVAL

1) Disconnect the PCV hose.

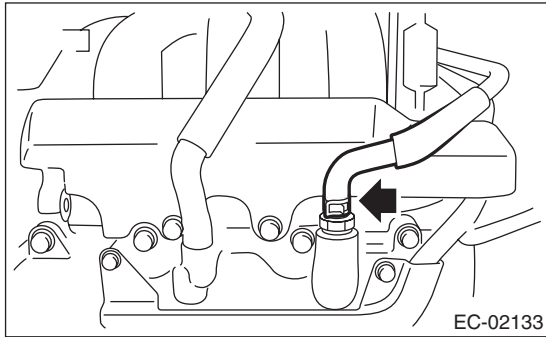

2) Remove the PCV valve from rocker cover.

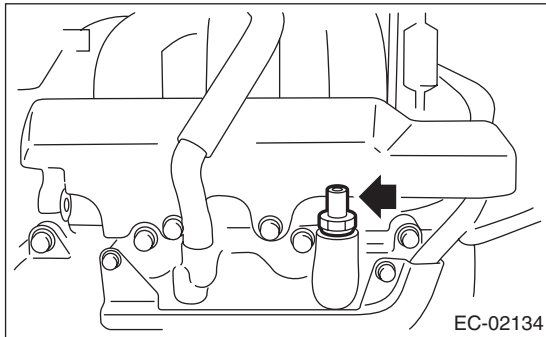

B: INSTALLATION

Install in the reverse order of removal.

NOTE:

Apply liquid gasket to the bolt threads of PCV valve.

Liquid gasket:

THREE BOND 1141 (Part No. 004403006) or equivalent

Tightening torque:

25 N·m (2.5 kgf-m, 18.4 ft-lb)

INTAKE (INDUCTION)

IN(H6DO)

	Page
1. General Description	2
2. Air Cleaner Element	4
3. Air Cleaner Case	5
4. Air Intake Chamber	7
5. Air Intake Duct	8
6. Resonator Chamber	9