






4. Electrical Component Location

A: LOCATION

1. CONTROL MODULE

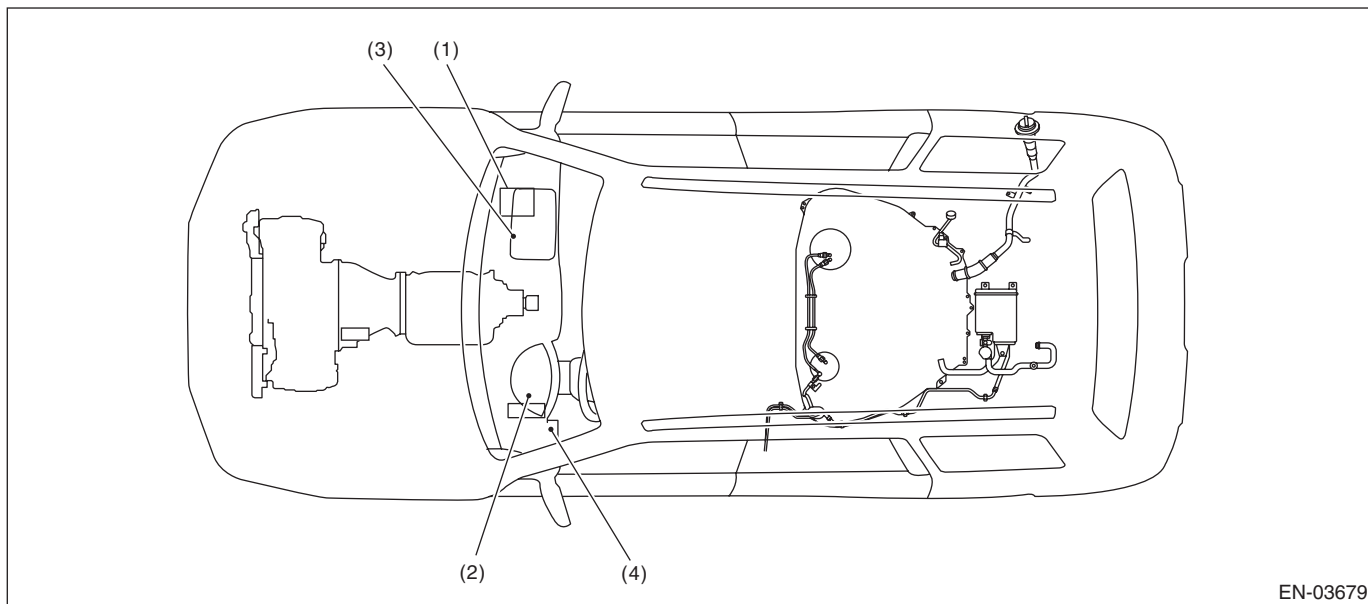


- | | | |
|---------------------------------|------------------------------------|-------------------------|
| (1) Engine control module (ECM) | (3) Delivery (test) mode connector | (4) Data link connector |
| (2) Malfunction indicator light | | |

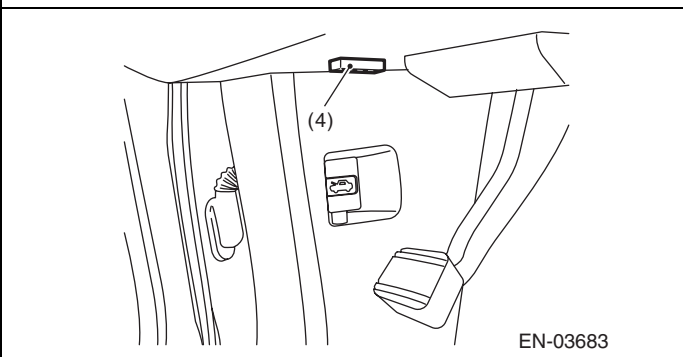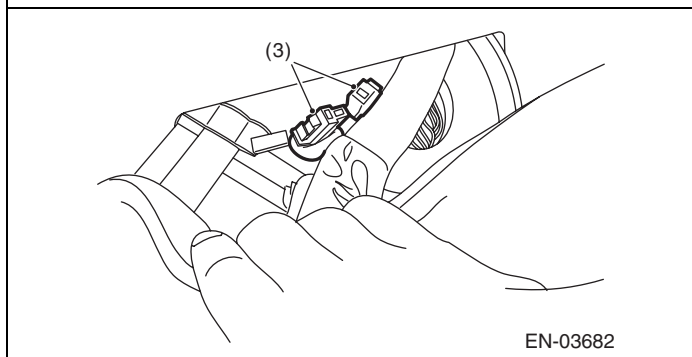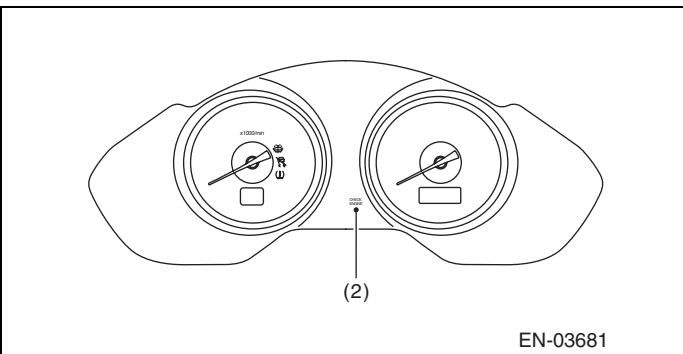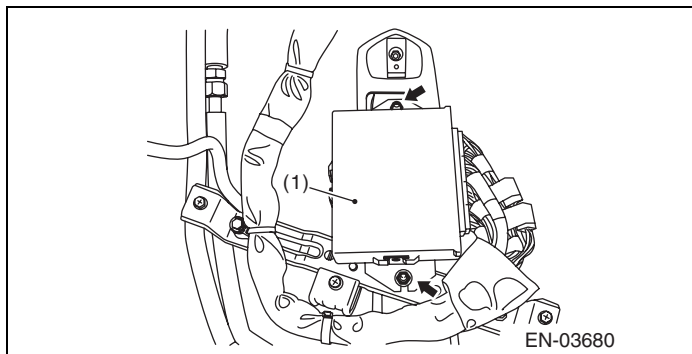

Electrical Component Location

ENGINE (DIAGNOSTICS)

2. SENSOR

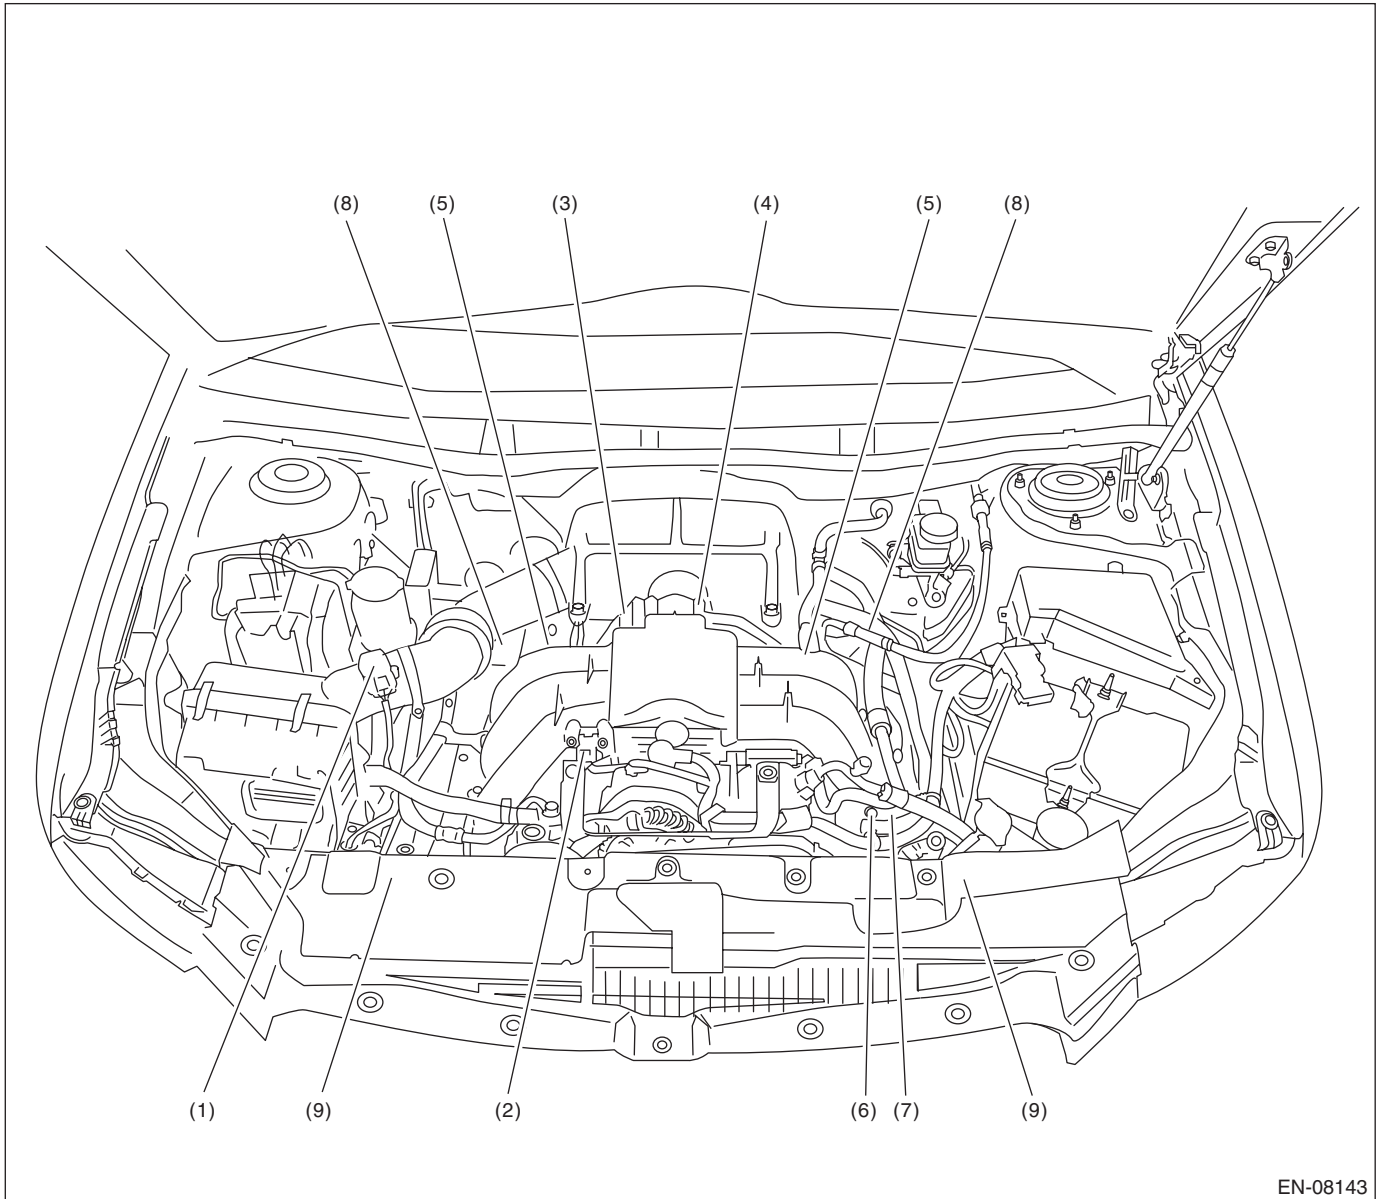


EN-08143


- | | | |
|---|---------------------------------------|--------------------------------------|
| (1) Mass air flow and intake air temperature sensor | (4) Crankshaft position sensor | (7) Oil temperature sensor |
| (2) Manifold absolute pressure sensor | (5) Knock sensor | (8) Intake camshaft position sensor |
| (3) Electronic throttle control | (6) Engine coolant temperature sensor | (9) Exhaust camshaft position sensor |

Electrical Component Location


ENGINE (DIAGNOSTICS)

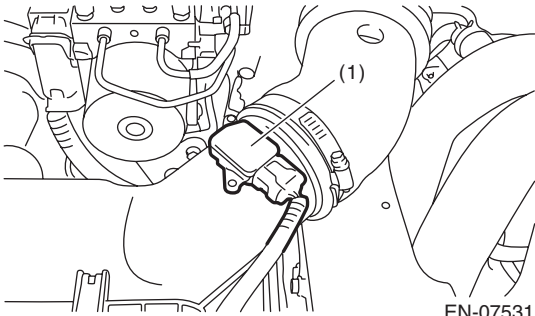


EN-07531

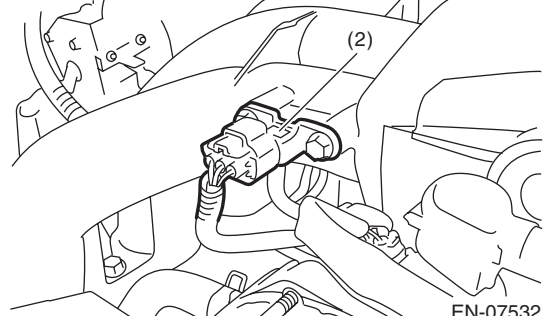


EN-07532

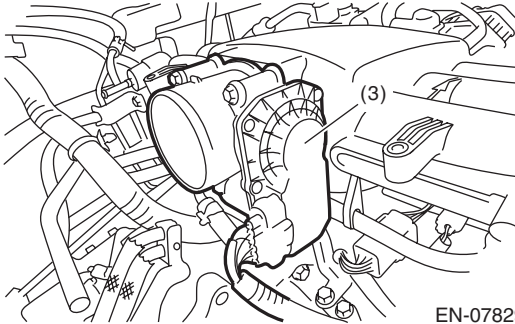


EN-07829

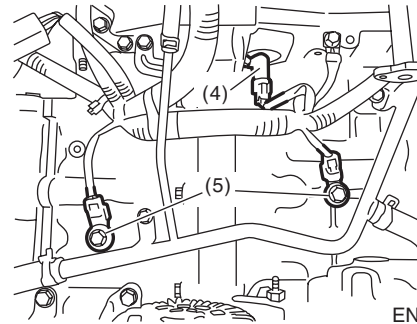


EN-07830

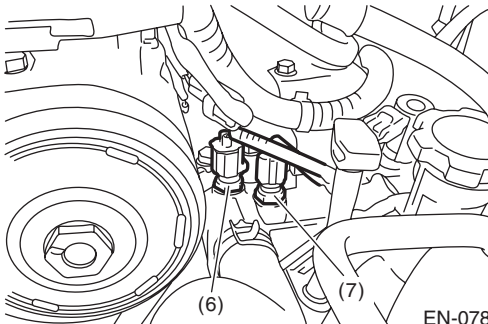

EN-07831

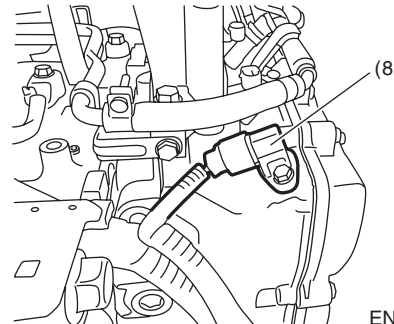

EN-07832

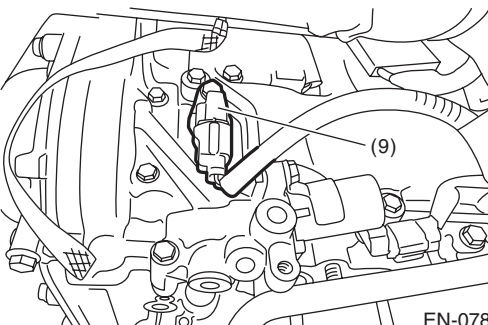


EN-07833

SUBARU.


Electrical Component Location

ENGINE (DIAGNOSTICS)

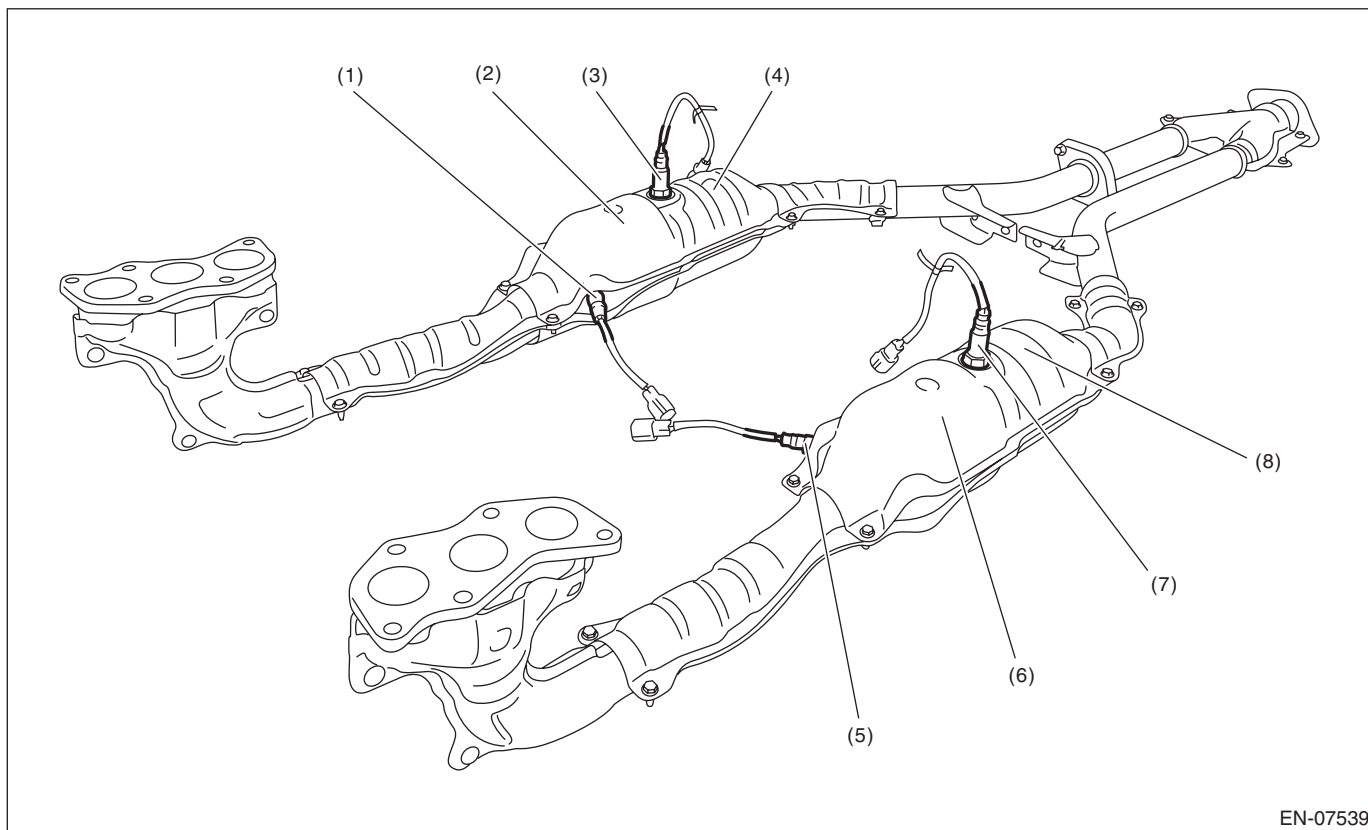

EN-07539

- | | | |
|----------------------------------|----------------------------------|---------------------------------|
| (1) Front oxygen (A/F) sensor RH | (4) Rear catalytic converter RH | (7) Rear oxygen sensor LH |
| (2) Front catalytic converter RH | (5) Front oxygen (A/F) sensor LH | (8) Rear catalytic converter LH |
| (3) Rear oxygen sensor RH | (6) Front catalytic converter LH | |



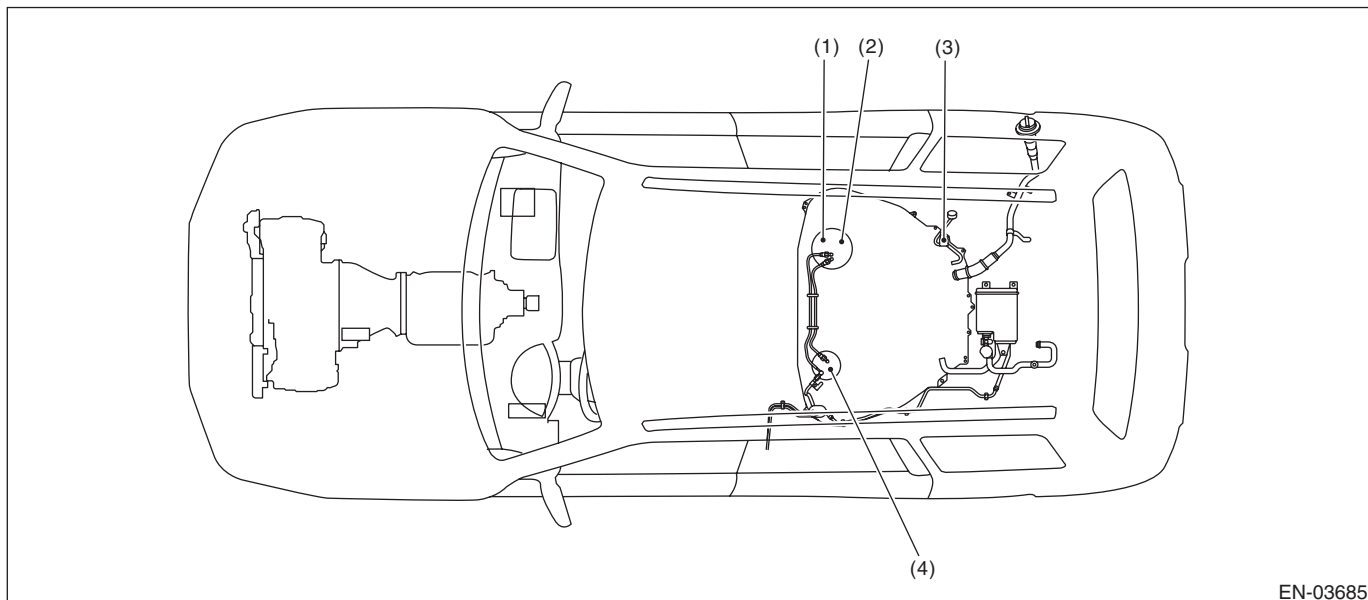


EN-03685

- | | | |
|-----------------------------|-------------------------------|---------------------------|
| (1) Fuel level sensor | (3) Fuel tank pressure sensor | (4) Fuel sub level sensor |
| (2) Fuel temperature sensor | | |

Electrical Component Location


ENGINE (DIAGNOSTICS)

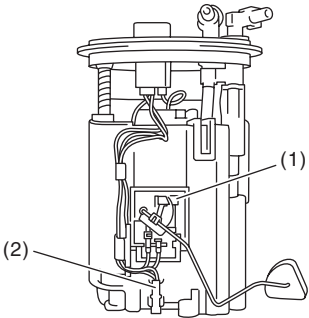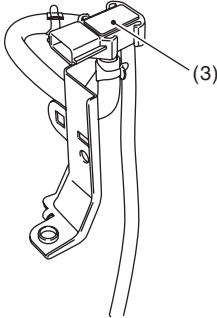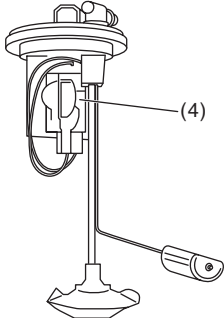 EN-03686	 EN-03687
 EN-03132	SUBARU.

Electrical Component Location

ENGINE (DIAGNOSTICS)

3. SOLENOID VALVE, ACTUATOR, EMISSION CONTROL SYSTEM PARTS AND IGNITION SYSTEM PARTS

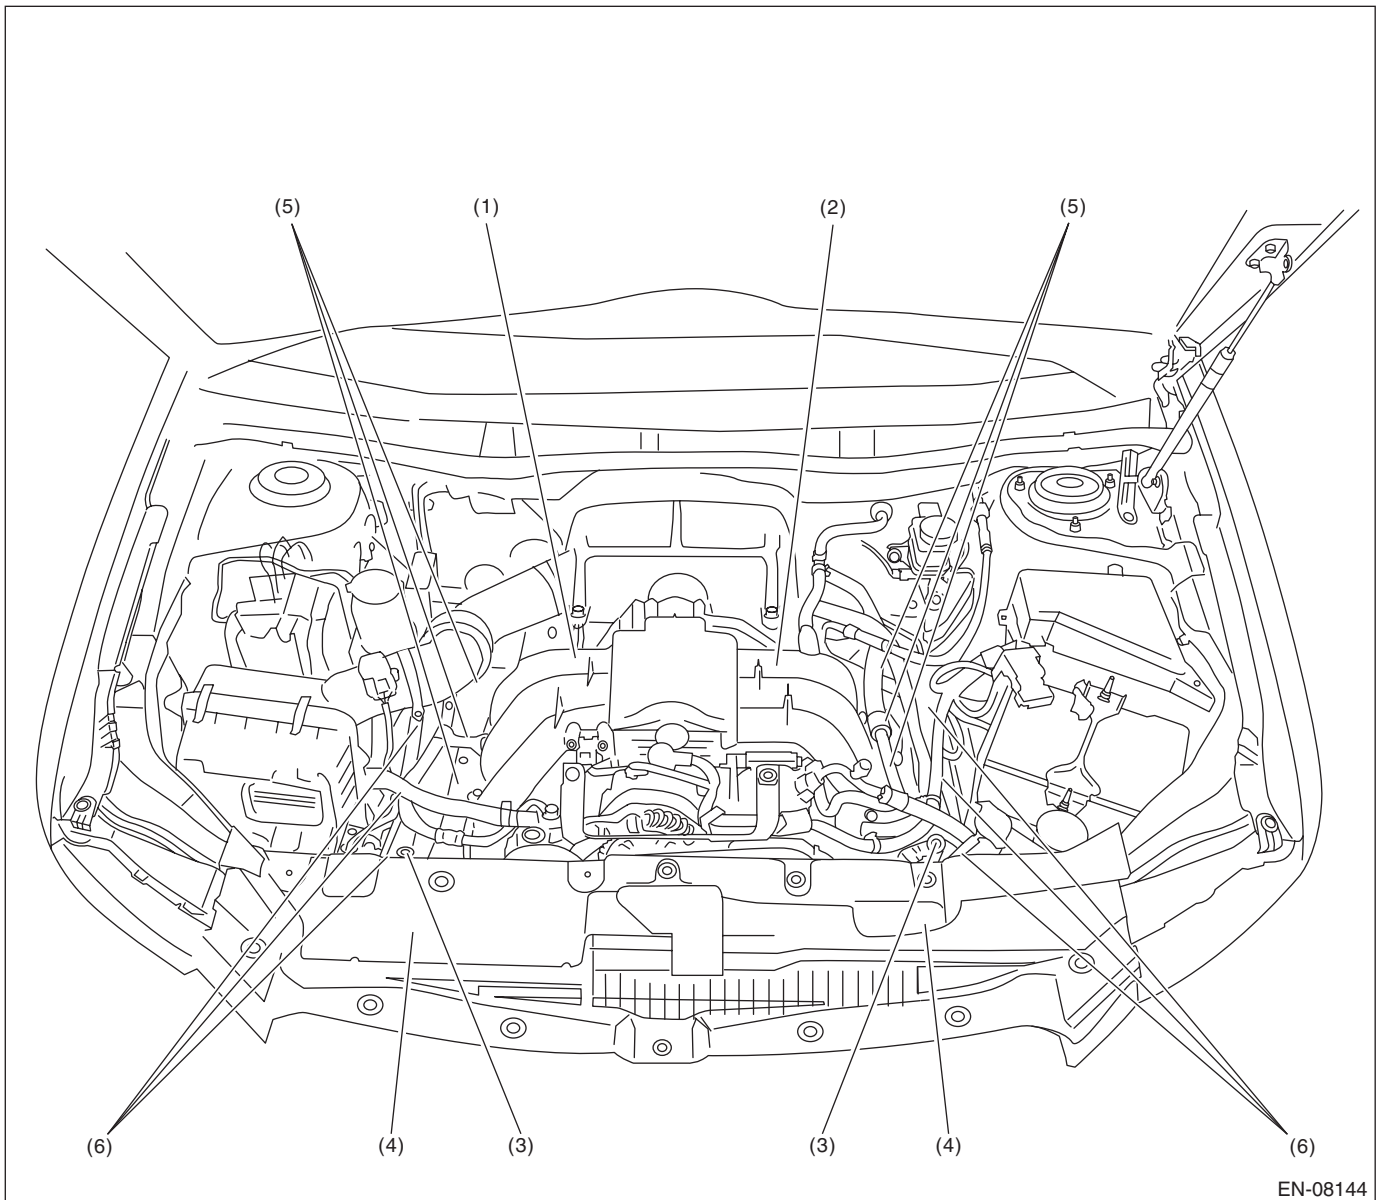

(1) Purge control solenoid valve

(3) Intake oil flow control solenoid valve

(5) Fuel injector


(2) EGR valve

(4) Exhaust oil flow control solenoid valve


(6) Ignition coil

Electrical Component Location


ENGINE (DIAGNOSTICS)

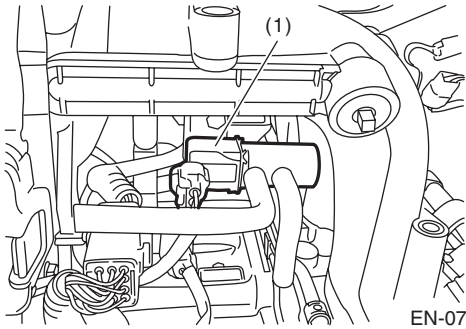


EN-07836

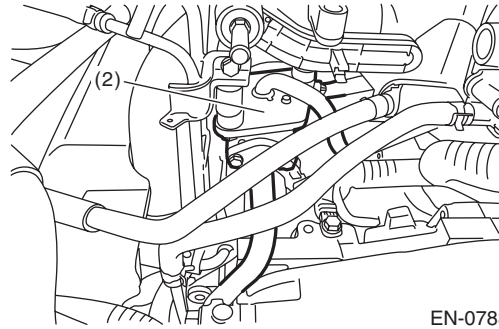


EN-07837

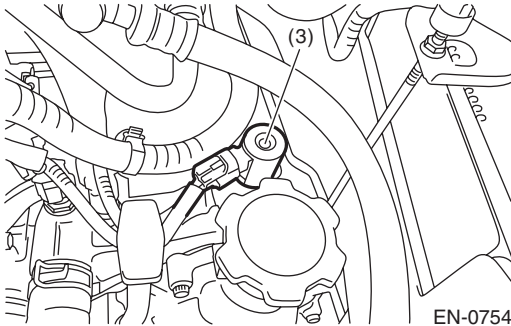


EN-07543

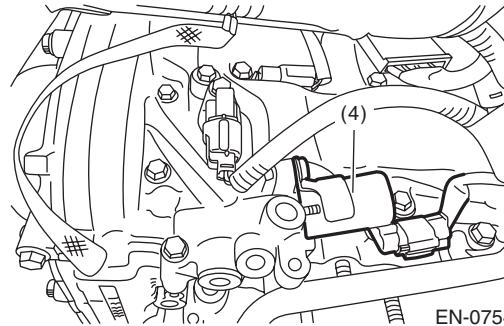

EN-07544

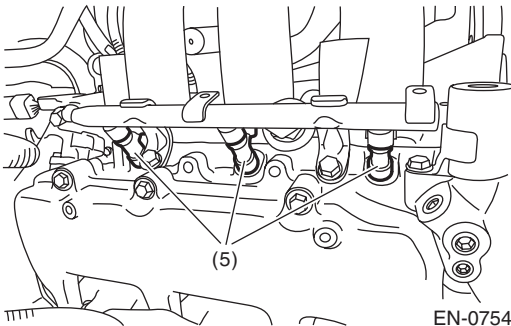


EN-07545

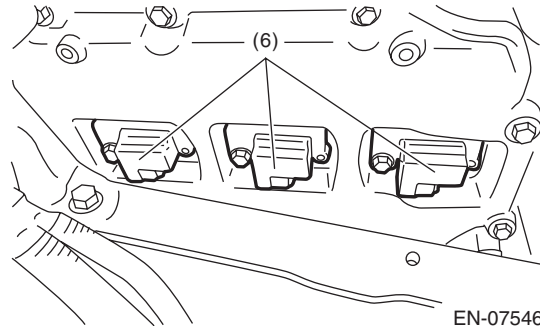

EN-07546


Electrical Component Location

ENGINE (DIAGNOSTICS)

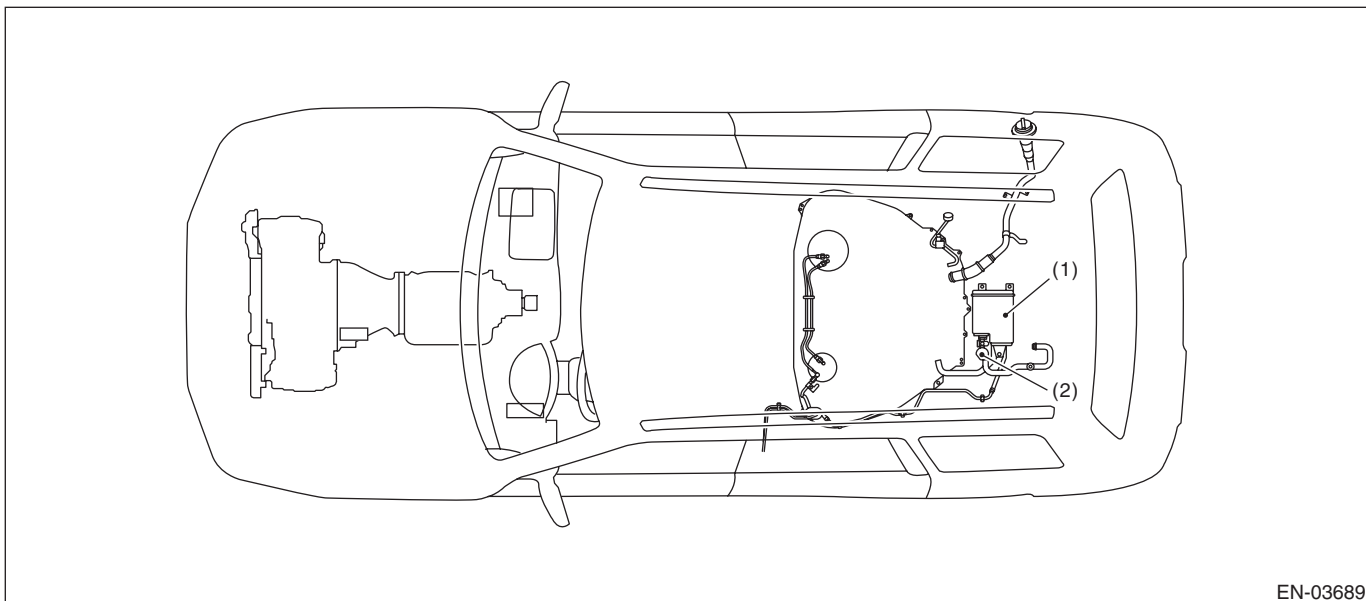

(1) Canister


(2) Drain valve

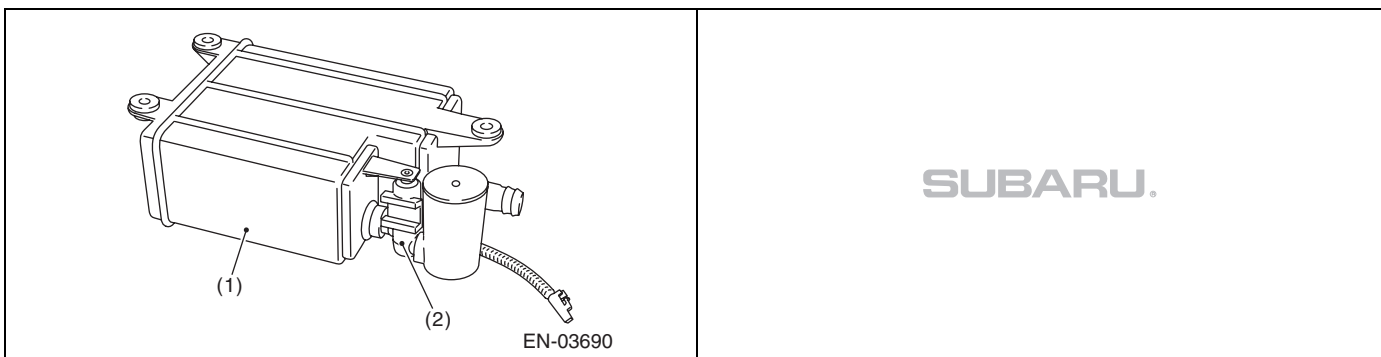

SUBARU.

Electrical Component Location

ENGINE (DIAGNOSTICS)

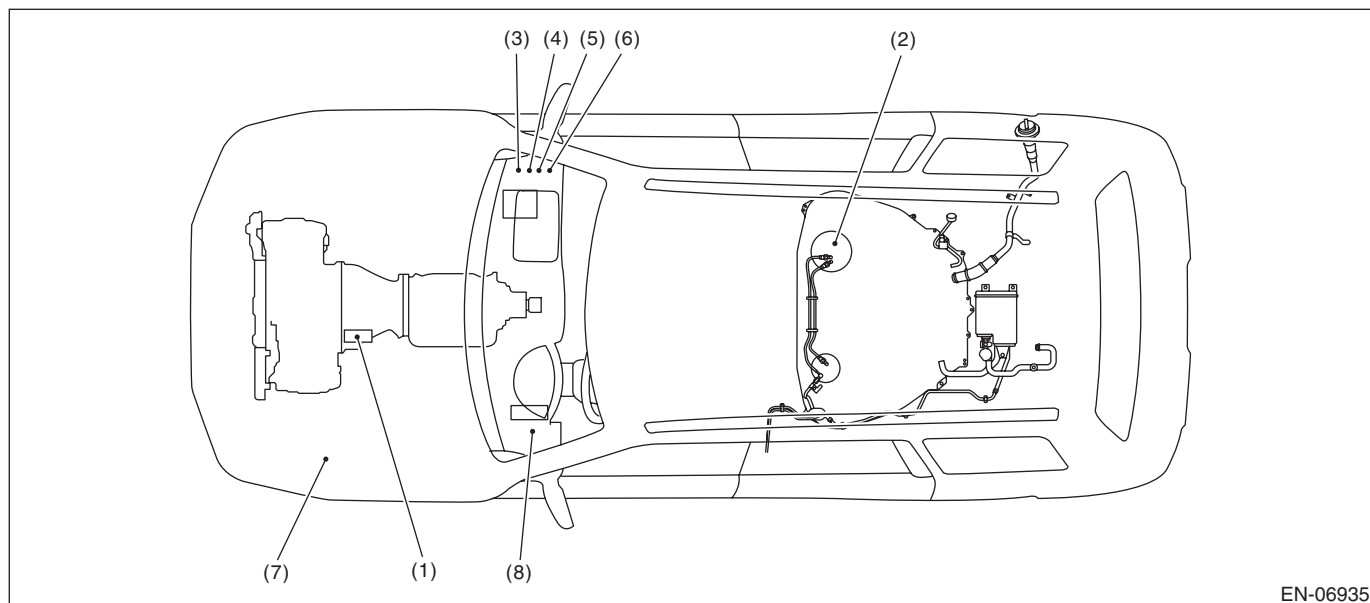

- | | | |
|------------------|---------------------------------------|--------------------|
| (1) Starter | (4) Main relay | (7) Main fan relay |
| (2) Fuel pump | (5) Electronic throttle control relay | (8) Starter relay |
| (3) Main relay 2 | (6) Fuel pump relay | |

