


General Description

EXHAUST

1. General Description

A: COMPONENT

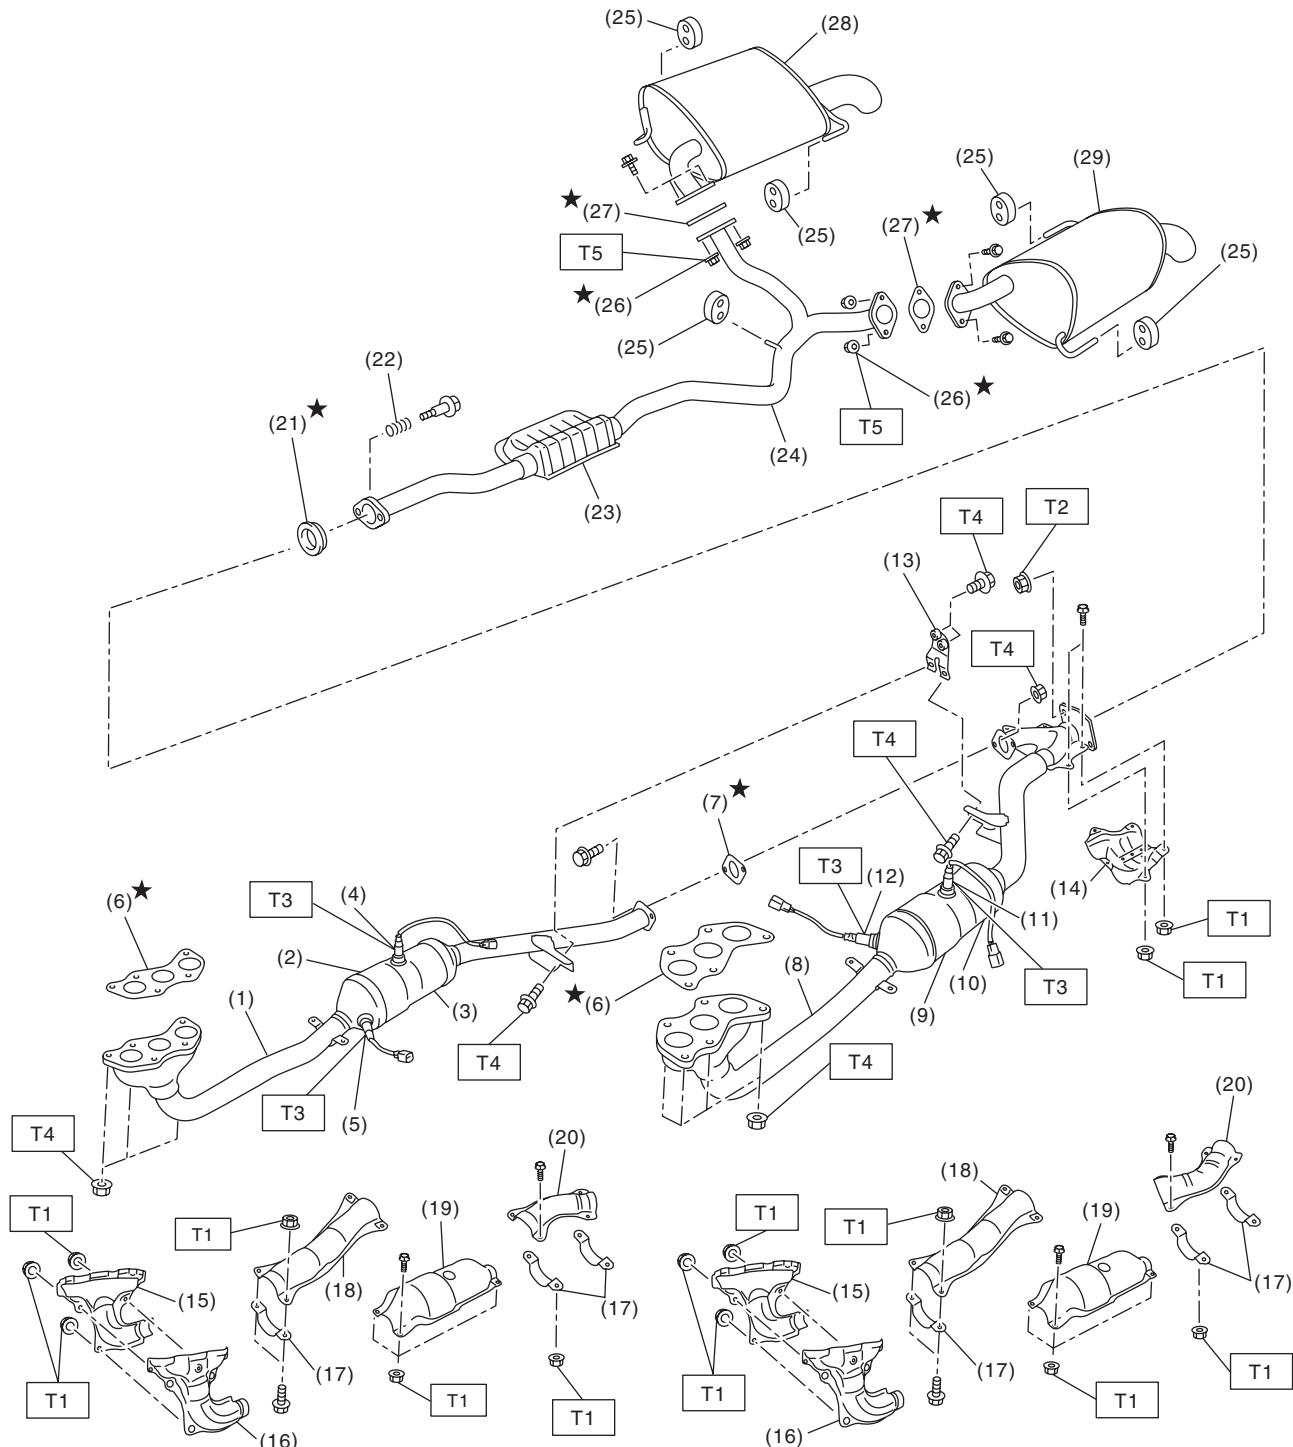

EX-02579

(1) Front exhaust pipe (RH)	(13) Bracket	(25) Cushion rubber
(2) Front catalytic converter (RH)	(14) Protector	(26) Self-locking nut
(3) Rear catalytic converter (RH)	(15) Front exhaust pipe cover (RH)	(27) Gasket
(4) Rear oxygen sensor (RH)	(16) Front exhaust pipe cover (LH)	(28) Muffler (RH)
(5) Front oxygen sensor (RH)	(17) Clamp	(29) Muffler (LH)
(6) Gasket	(18) Front exhaust pipe upper cover (Front)	
(7) Gasket	(19) Catalytic converter cover	Tightening torque:N·m (kgf·m, ft·lb)
(8) Front exhaust pipe (LH)	(20) Front exhaust pipe upper cover (Rear)	T1: 13 (1.3, 9.6)
(9) Front catalytic converter (LH)	(21) Gasket	T2: 18 (1.8, 13.3)
(10) Rear catalytic converter (LH)	(22) Spring	T3: 21 (2.1, 15.5)
(11) Rear oxygen sensor (LH)	(23) Chamber	T4: 30 (3.1, 22.1)
(12) Front oxygen sensor (LH)	(24) Rear exhaust pipe	T5: 48 (4.9, 35.4)

B: CAUTION

- Wear appropriate work clothing, including a cap, protective goggles and protective shoes when performing any work.
- Remove contamination including dirt and corrosion before removal, installation or disassembly.
- Keep the disassembled parts in order and protect them from dust and dirt.
- Before removal, installation or disassembly, be sure to clarify the failure. Avoid unnecessary removal, installation, disassembly and replacement.
- Vehicle components are extremely hot after driving. Be wary of receiving burns from heated parts.
- Be sure to tighten fasteners including bolts and nuts to the specified torque.
- Place shop jacks or rigid racks at the specified points.
- Before disconnecting connectors of sensors or units, be sure to disconnect the ground cable from the battery.
- If any fat adheres to the exhaust pipe, wipe it off. Otherwise a fire may happen.