

# Front Exhaust Pipe

## EXHAUST


## 2. Front Exhaust Pipe

### A: REMOVAL


#### CAUTION:

Vehicle components are extremely hot after driving. Be wary of receiving burns from heated parts.

- 1) Disconnect the ground cable from battery.
- 2) Lift up the vehicle.
- 3) Remove the under cover.
- 4) Disconnect the front oxygen (A/F) sensor connector (A) and rear oxygen sensor connector (B).

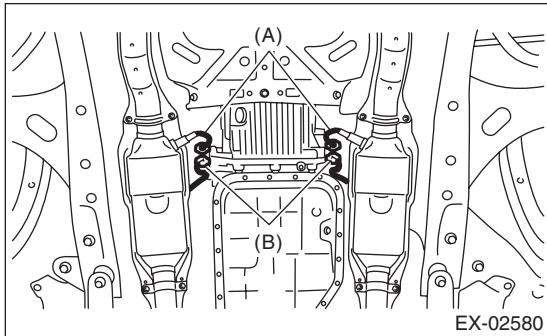


- 5) Separate the front exhaust pipe from rear exhaust pipe.

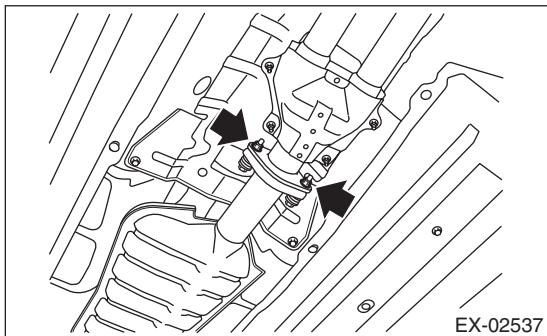


- 6) Remove the nuts which hold front exhaust pipe onto cylinder heads.

#### CAUTION:

Be careful not to drop the front exhaust pipe assembly.

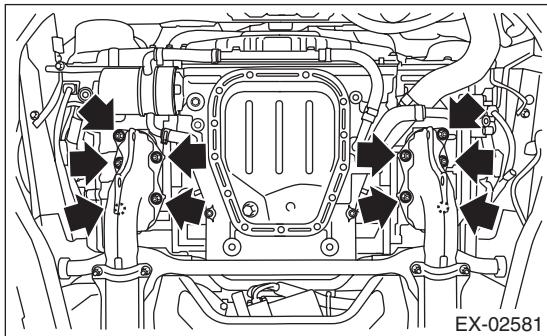

- 7) Remove the bolts which hold front exhaust pipe assembly to hanger bracket.

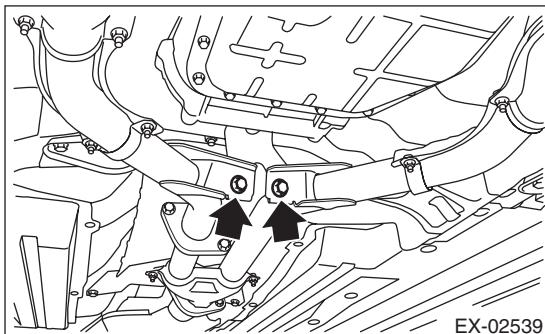


- 8) Remove the front exhaust pipe assembly from the vehicle.

#### CAUTION:

- Be careful not to let the front exhaust pipe assembly fall off when removing, since it is very heavy.
- After removing the front exhaust pipe assembly, do not apply excessive pulling force on the rear exhaust pipe.

- 9) Separate the front exhaust pipe (RH) from front exhaust pipe assembly.

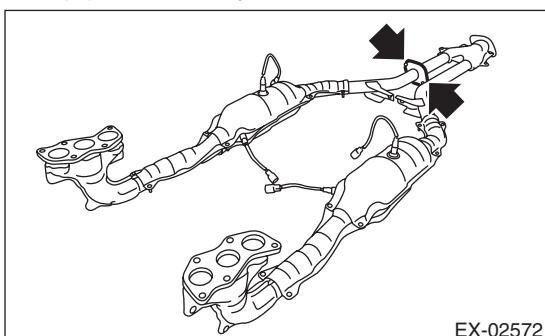

- 10) Remove the front oxygen (A/F) sensor and rear oxygen sensor. <Ref. to FU(H6DO)-35, REMOVAL, Front Oxygen (A/F) Sensor.> <Ref. to FU(H6DO)-37, REMOVAL, Rear Oxygen Sensor.>

**B: INSTALLATION**

1) Install the front oxygen (A/F) sensor and rear oxygen sensor. <Ref. to FU(H6DO)-35, INSTALLATION, Front Oxygen (A/F) Sensor. > <Ref. to FU(H6DO)-37, INSTALLATION, Rear Oxygen Sensor. >


2) Install the front exhaust pipe (RH) to the front exhaust pipe (LH).

NOTE:

Use a new gasket.

**Tightening torque:**

30 N·m (3.1 kgf-m, 22.1 ft-lb)

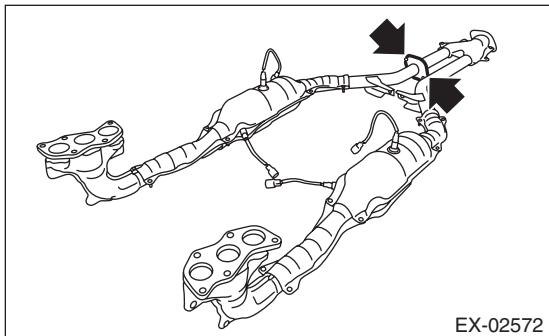


3) Install the front exhaust pipe assembly to vehicle.


4) Temporarily tighten the nuts which hold front exhaust pipe to cylinder head.

NOTE:

Use a new gasket.

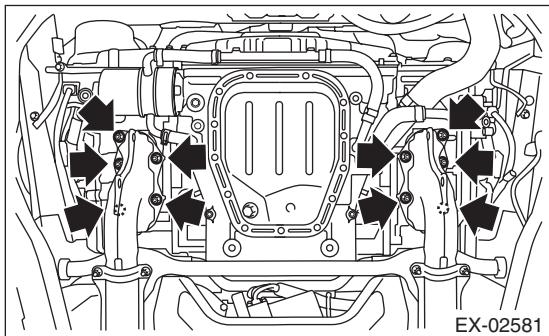

5) Temporarily tighten the bolts which hold front exhaust pipe assembly to hanger bracket.

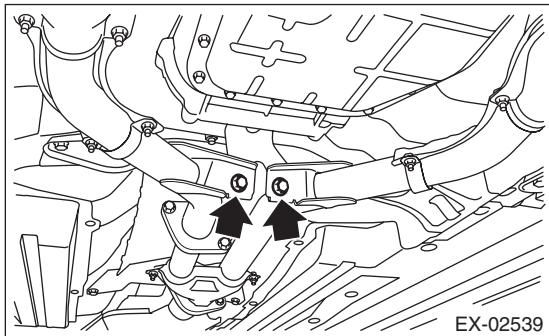


6) Tighten the bolts which install front exhaust pipe to rear exhaust pipe.

NOTE:

Use a new gasket.

**Tightening torque:**


18 N·m (1.8 kgf-m, 13.3 ft-lb)

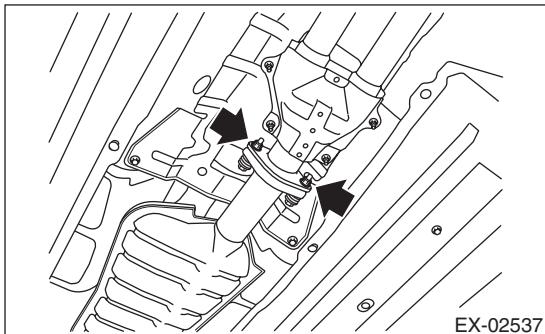

7) Tighten the bolts which hold front exhaust pipe assembly to hanger bracket.

**Tightening torque:**


30 N·m (3.1 kgf-m, 22.1 ft-lb)

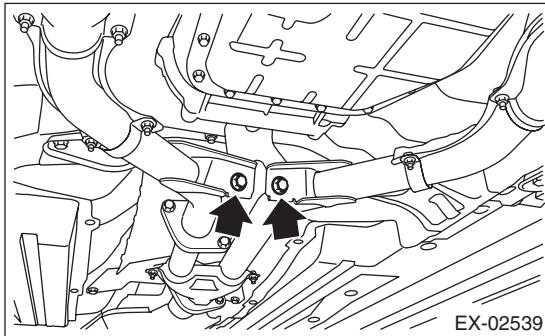

8) Install the nuts which hold front exhaust pipe to cylinder head.

**Tightening torque:**

30 N·m (3.1 kgf-m, 22.1 ft-lb)

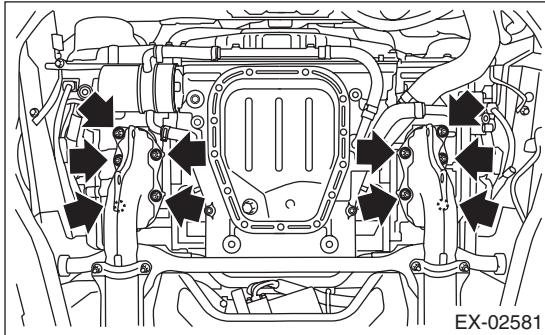


9) Install the under cover.

# Front Exhaust Pipe

## EXHAUST

- 10) Connect the front oxygen (A/F) sensor connector (A) and rear oxygen sensor connector (B).

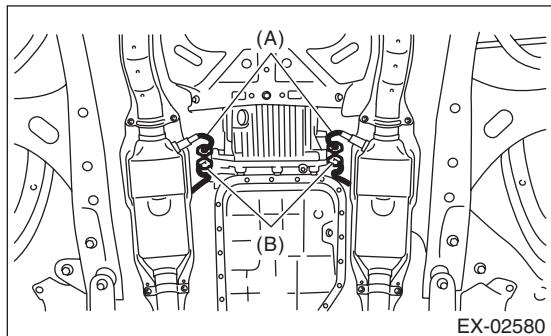

- 11) Lower the vehicle.
- 12) Connect the ground cable to battery.

## C: INSPECTION

- 1) Check the connections and welds for exhaust leaks.
- 2) Make sure there are no holes or rusting.