

4. Muffler


A: REMOVAL

CAUTION:


Vehicle components are extremely hot after driving. Be wary of receiving burns from heated parts.

- 1) Lift up the vehicle.
- 2) Separate the muffler from rear exhaust pipe.

- LH side

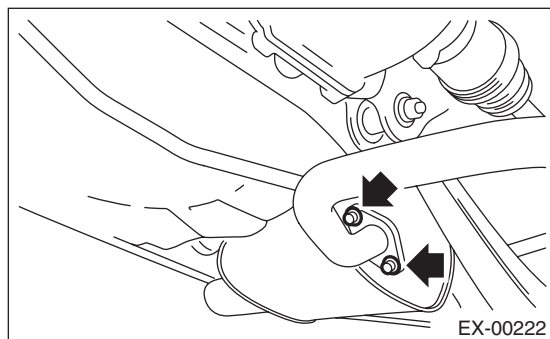

- RH side

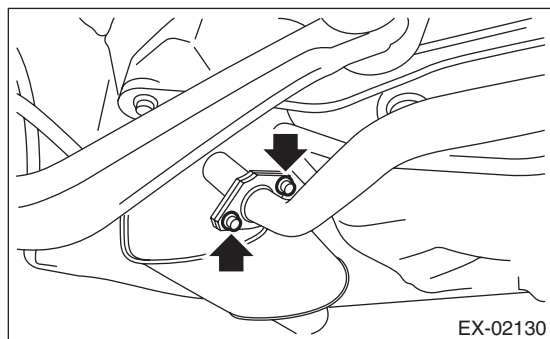


3) Apply a coat of spray type lubricant to the mating area of cushion rubber.

4) Remove the front and rear cushion rubber, and then remove the muffler.


CAUTION:

Be careful not to drop the muffler during removal.

- LH side

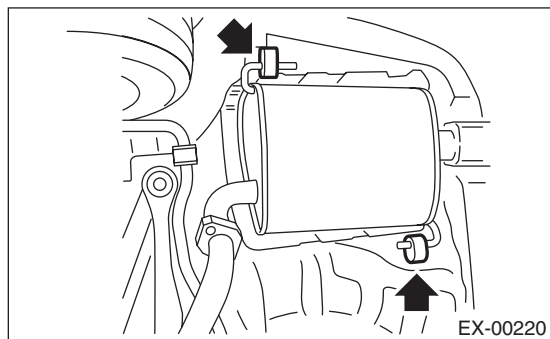

- RH side

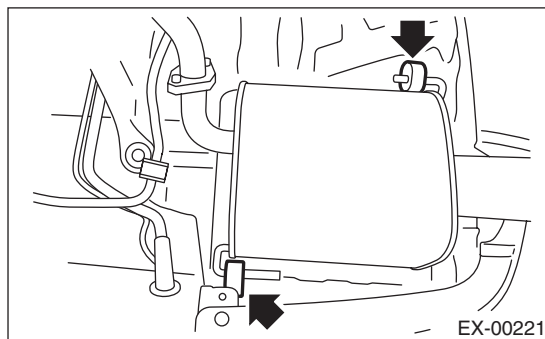

B: INSTALLATION

Install in the reverse order of removal.


NOTE:

- Use a new gasket and self-locking nut.
- After assembling, degrease the lubricant which was applied to the cushion rubber while removing/installing.


Tightening torque:

48 N·m (4.9 kgf-m, 35.4 ft-lb)

- LH side

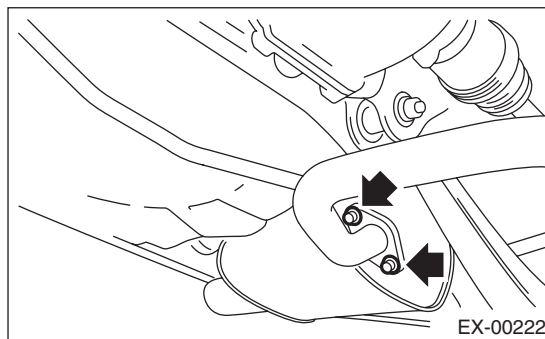

- RH side

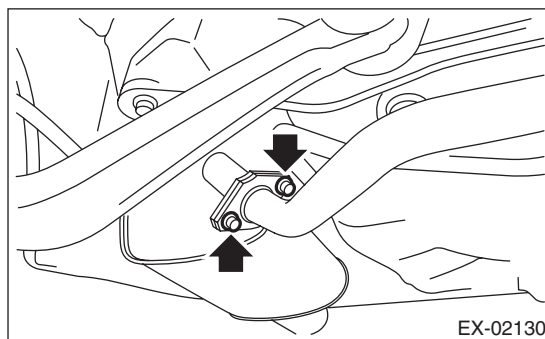

C: INSPECTION

- 1) Check the connections and welds for exhaust leaks.
- 2) Make sure there are no holes or rusting.
- 3) Check the cushion rubber for wear or crack.

Muffler

EXHAUST

COOLING

CO(H6DO)

	Page
1. General Description	2
2. Radiator Fan System	8
3. Engine Coolant	11
4. Water Pump	13
5. Thermostat	14
6. Radiator	16
7. Radiator Cap	21
8. Radiator Main Fan and Fan Motor	22
9. Radiator Sub Fan and Fan Motor	26
10. Reservoir Tank	27
11. Radiator Fan Control Unit	30
12. Engine Cooling System Trouble in General	31