


12. Fuel Injector


A: REMOVAL

1. RH SIDE

- 1) Remove the collector cover.
- 2) Release the fuel pressure. <Ref. to FU(H6DO)-44, RELEASING OF FUEL PRESSURE, PROCEDURE, Fuel.>
- 3) Disconnect the ground cable from battery.
- 4) Open the fuel filler lid, and remove the fuel filler cap.
- 5) Remove the air cleaner case. <Ref. to IN(H6DO)-5, REMOVAL, Air Cleaner Case.>
- 6) Remove the fuel pipe protector RH.

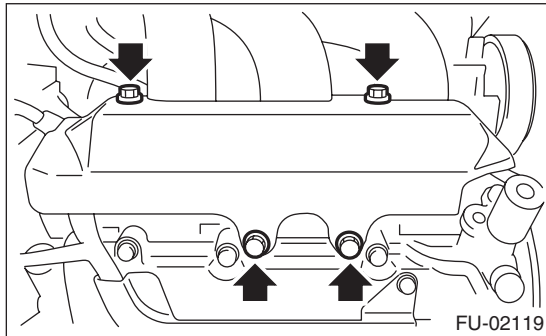


- 7) Disconnect the connector from fuel injector.
- 8) Remove the engine harness from the fuel injector pipe RH.
- 9) Remove the bolt which holds fuel injector pipe onto cylinder head.

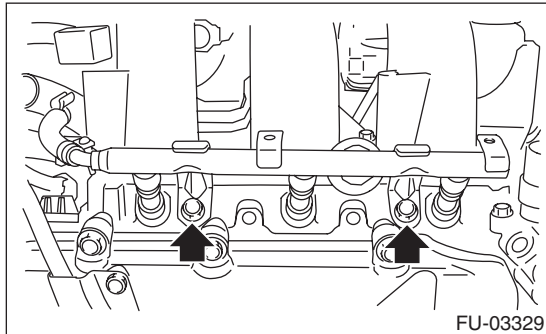


- 10) Remove the fuel injector while lifting up the fuel injector pipe.

2. LH SIDE


- 1) Remove the collector cover.
- 2) Release the fuel pressure. <Ref. to FU(H6DO)-44, RELEASING OF FUEL PRESSURE, PROCEDURE, Fuel.>
- 3) Remove the battery.
- 4) Open the fuel filler lid and remove the fuel filler cap.
- 5) Remove the harness from the fuel pipe protector LH.
- 6) Disconnect the PCV hose and blow-by hose.

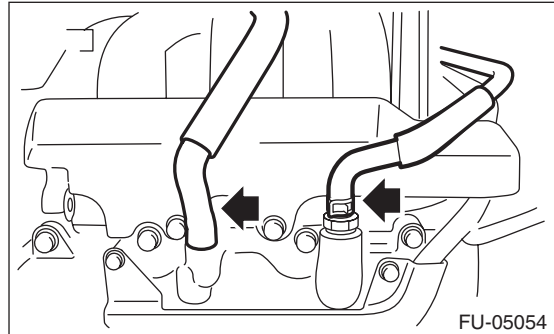

- 7) Remove the fuel pipe protector LH.

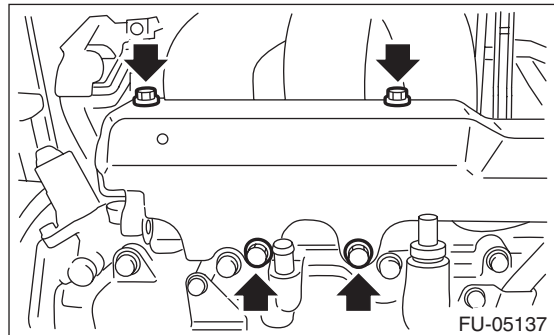

- 8) Disconnect the connector from fuel injector.
- 9) Remove the engine harness from the fuel injector pipe LH.
- 10) Remove the bolt which holds fuel injector pipe onto cylinder head.

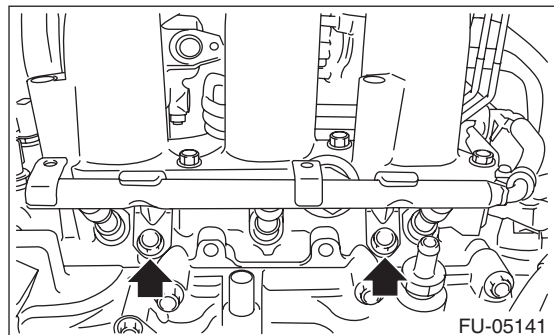

- 11) Remove the fuel injector while lifting up the fuel injector pipe.

Fuel Injector

FUEL INJECTION (FUEL SYSTEMS)

B: INSTALLATION

1. RH SIDE


Install in the reverse order of removal.

NOTE:

Use new O-rings.


Tightening torque:

19 N·m (1.9 kgf-m, 14.0 ft-lb)

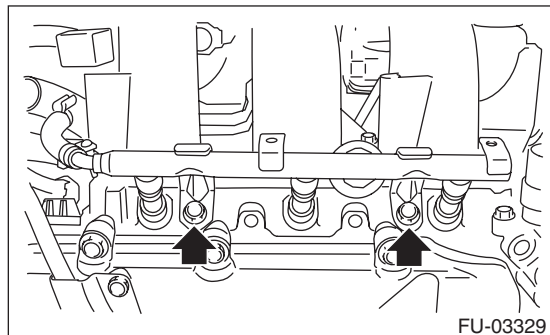

Tightening torque:

19 N·m (1.9 kgf-m, 14.0 ft-lb)

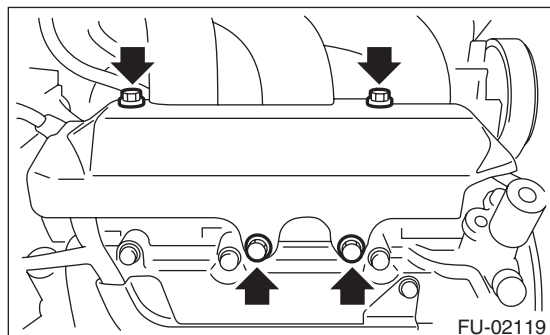

2. LH SIDE


Install in the reverse order of removal.

NOTE:

Use new O-rings.

Tightening torque:

19 N·m (1.9 kgf-m, 14.0 ft-lb)

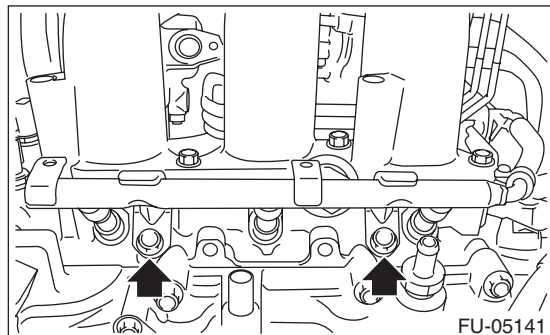

Tightening torque:

19 N·m (1.9 kgf-m, 14.0 ft-lb)

