



16. Rear Oxygen Sensor

A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Lift up the vehicle.
- 3) Disconnect the connector from rear oxygen sensor.
- LH side

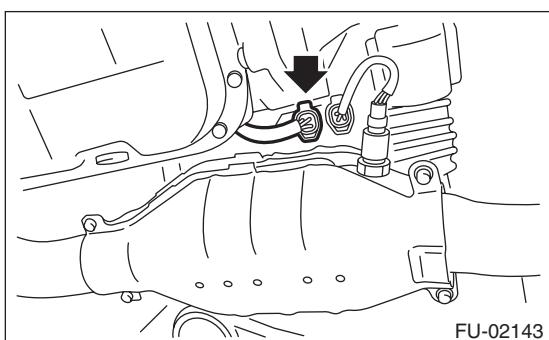

- RH side

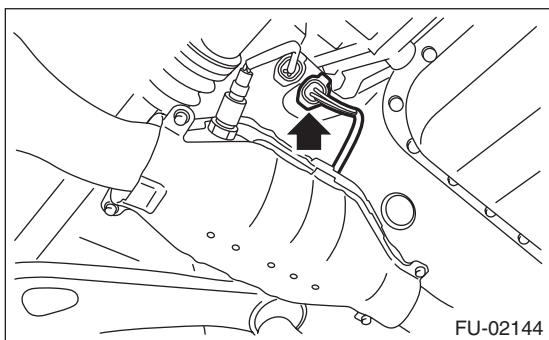


- 4) Remove the clip holding the harness.
- 5) Apply spray-type lubricant to the threaded portion of rear oxygen sensor, and leave it for one minute or more.
- 6) Remove the rear oxygen sensor.


CAUTION:

When removing the rear oxygen sensor, wait until exhaust pipe cools, otherwise it will damage the exhaust pipe.

- LH side

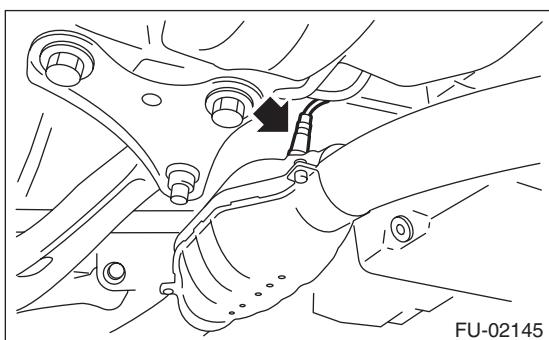

- RH side

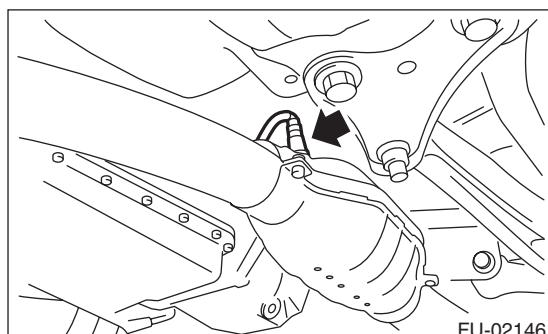

B: INSTALLATION

CAUTION:

If the lubricant adheres to the exhaust pipe, wipe it off with cloth to avoid emitting smoke or causing a fire.

- 1) Before installing rear oxygen sensor, apply the anti-seize compound only to the threaded portion of rear oxygen sensor to make the next removal easier.

CAUTION:

Never apply anti-seize compound to the protector of rear oxygen sensor.

Anti-seize compound:


NEVER-SEEZ NSN, JET LUBE SS-30 or equivalent

- 2) Install the rear oxygen sensor.


Tightening torque:

21 N·m (2.1 kgf-m, 15.5 ft-lb)

- LH side

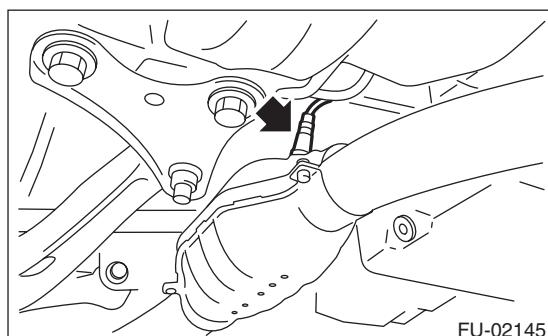

- RH side

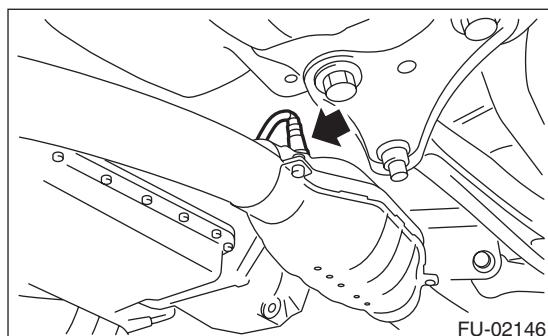


- 3) Hold the harness with clip.

Rear Oxygen Sensor


FUEL INJECTION (FUEL SYSTEMS)

4) Connect the connector to rear oxygen sensor.

- LH side

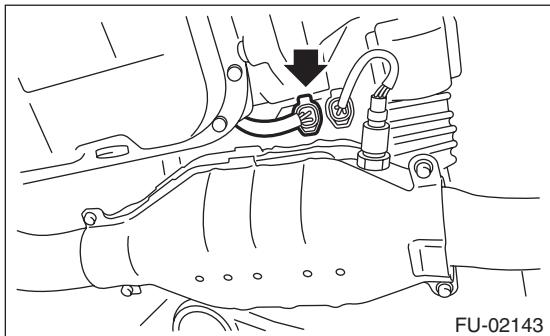

- RH side

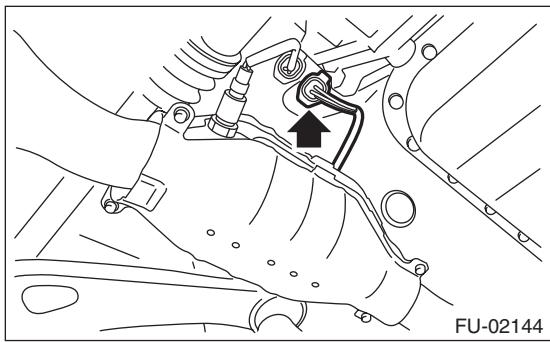

5) Lower the vehicle.

6) Connect the ground cable to battery.