


Electronic Throttle Control Relay

FUEL INJECTION (FUEL SYSTEMS)


20. Electronic Throttle Control Relay

A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the glove box. <Ref. to EI-38, REMOVAL, Glove Box.>
- 3) Remove the harness cover (A).

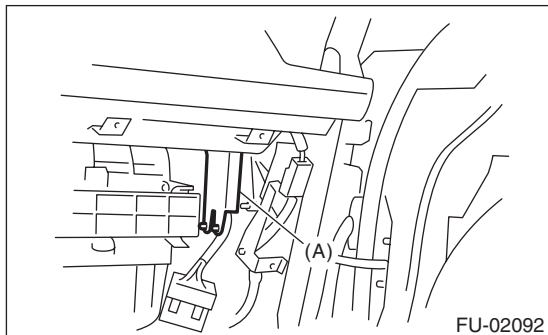

- 4) Remove the electronic throttle control relay.

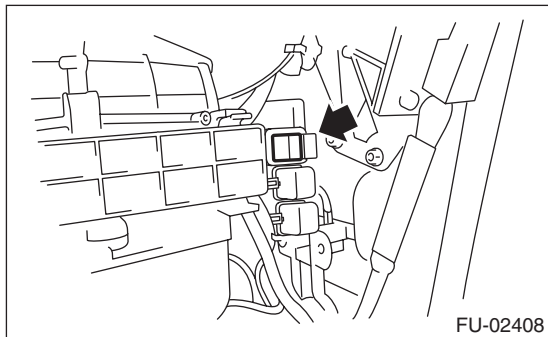

B: INSTALLATION

Install in the reverse order of removal.