



2. Air Cleaner Element

A: REMOVAL


- 1) Disconnect the ground cable from battery.
- 2) Disconnect the connector from the mass air flow and intake air temperature sensor.

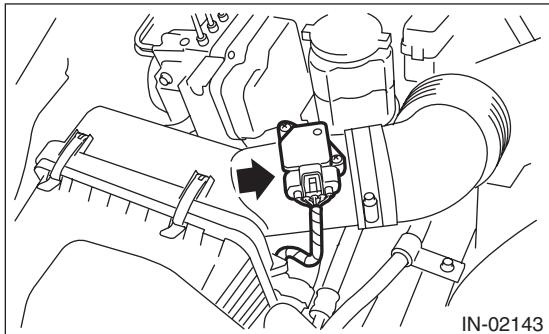

- 3) Loosen the clamps (A) which connect the air cleaner case (rear) to intake duct.
- 4) Remove the clip (B) securing the upper side of air cleaner case.

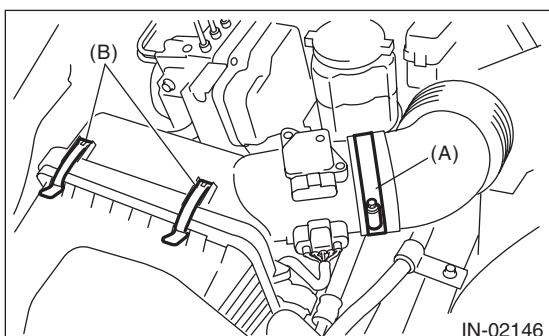

- 5) Pull the air cleaner case (rear) backward of the vehicle, and remove the air cleaner element.

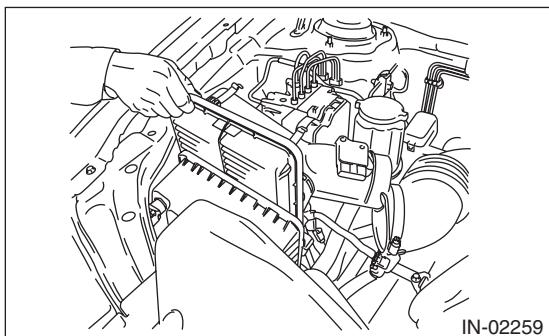

B: INSTALLATION


Install in the reverse order of removal.

CAUTION:

When replacing the air cleaner element, use SUBARU genuine air cleaner element according to the engine type. Using other air cleaner element may affect engine performance.

NOTE:

- Make sure there is no foreign material in the air cleaner case.
- When installing the air cleaner case (rear), position the protrusion on the air cleaner case (rear) with the hole in the air cleaner case (front) to install the air cleaner case (rear).

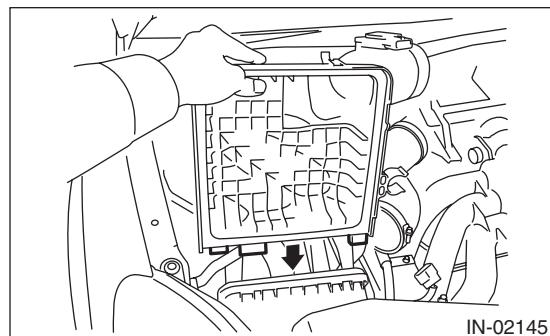

C: INSPECTION

Replace if excessively damaged or dirty.