


## 4. Air Intake Chamber

### A: REMOVAL

- 1) Remove the collector cover.
- 2) Loosen the clamp (A) which connects air intake chamber to throttle body.
- 3) Loosen the clamp (B) which connects intake boot to air intake chamber.
- 4) Remove the bolt (C) which secures air intake chamber and collector cover bracket to the stay.

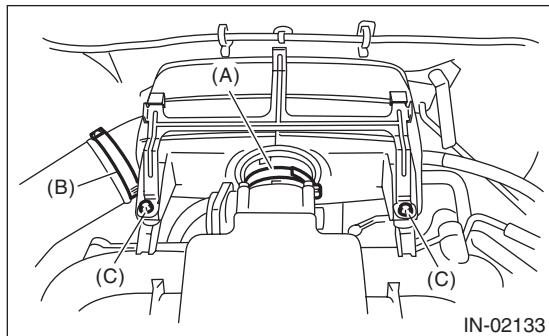

IN-02133

- 5) Disconnect the blow-by hoses, and then remove air intake chamber.

### B: INSTALLATION

Install in the reverse order of removal.


#### *Tightening torque:*

**Clamp (A), (B)**

**3 N·m (0.3 kgf-m, 2.2 ft-lb)**

**Bolt (C)**

**6.5 N·m (0.7 kgf-m, 4.8 ft-lb)**

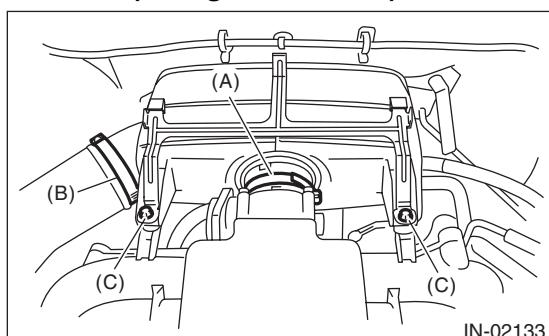

IN-02133

### C: INSPECTION

- 1) Check for cracks or loose connections.
- 2) Check that no foreign matter is mixed in air intake chamber.