

6. Resonator Chamber

A: REMOVAL

The resonator chamber and air cleaner case are integrated into one unit; therefore, refer to "Air Cleaner Case" for the removal procedure. <Ref. to IN(H6DO)-5, REMOVAL, Air Cleaner Case.>

B: INSTALLATION

The resonator chamber and air cleaner case are integrated into one unit; therefore, refer to "Air Cleaner Case" for installation procedure. <Ref. to IN(H6DO)-5, INSTALLATION, Air Cleaner Case.>

C: INSPECTION

Check for cracks or loose connections.

Resonator Chamber

INTAKE (INDUCTION)

MECHANICAL

ME(H6DO)

	Page
1. General Description	2
2. Compression	24
3. Idle Speed	25
4. Ignition Timing	26
5. Intake Manifold Vacuum	27
6. Engine Oil Pressure	28
7. Fuel Pressure	29
8. Valve Clearance	30
9. Engine Assembly	33
10. Engine Mounting	41
11. Preparation for Overhaul	42
12. V-belt	43
13. Crank Pulley	44
14. Chain Cover	45
15. Timing Chain Assembly	50
16. Cam Sprocket	69
17. Crank Sprocket	70
18. Camshaft	71
19. Cylinder Head	77
20. Cylinder Block	88
21. Oil Flow Control Solenoid Valve	111
22. Intake and Exhaust Valve	112
23. Piston	113
24. Connecting Rod	114
25. Crankshaft	115
26. Engine Trouble in General	116
27. Engine Noise	122