

21.Oil Flow Control Solenoid Valve

A: REMOVAL

The oil flow control solenoid valve is listed in the FU section. <Ref. to FU(H6DO)-33, REMOVAL, Oil Flow Control Solenoid Valve.>

B: INSTALLATION

The oil flow control solenoid valve is listed in the FU section. <Ref. to FU(H6DO)-33, INSTALLATION, Oil Flow Control Solenoid Valve.>