

23.Piston

A: SPECIFICATION

Refer to "Cylinder Block" for removal and installation procedures of pistons. <Ref. to ME(H6DO)-88, REMOVAL, Cylinder Block.> <Ref. to ME(H6DO)-94, INSTALLATION, Cylinder Block.>