


15. Rear Vehicle Speed Sensor


A: REMOVAL

- 1) Set the vehicle on a lift.
- 2) Disconnect the ground cable from battery.
- 3) Lift up the vehicle.
- 4) Clean the transmission exterior.
- 5) Separate the front exhaust pipe from rear exhaust pipe.

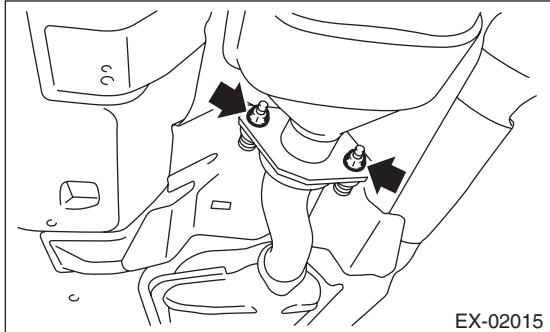


EX-02015

- 6) Remove the bolts holding the heat shield cover, and move the heat shield cover to the rear.
- 7) Disconnect the rear vehicle speed sensor connector.

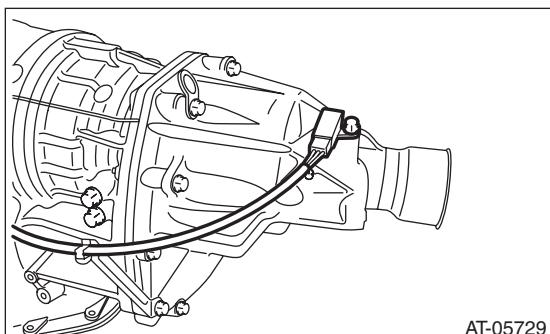

AT-05729

- 8) Remove the rear vehicle speed sensor.

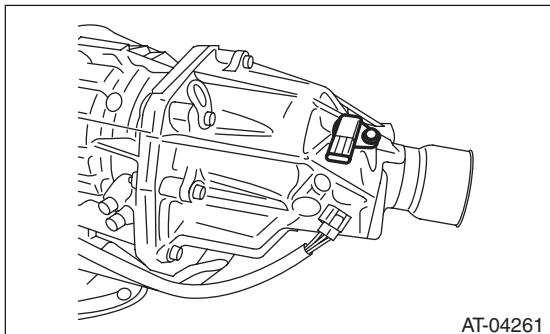


AT-04261

B: INSTALLATION

- 1) Install the rear vehicle speed sensor.


Tightening torque:

7 N·m (0.7 kgf-m, 5.2 ft-lb)

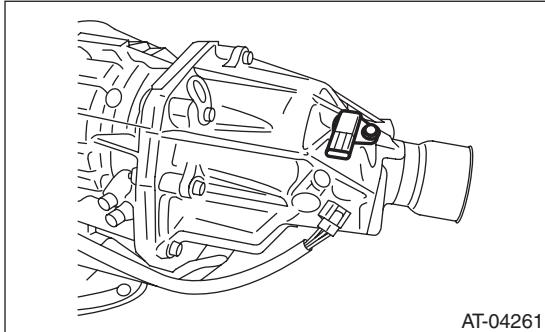

AT-04261

- 2) Connect the rear vehicle speed sensor connector.

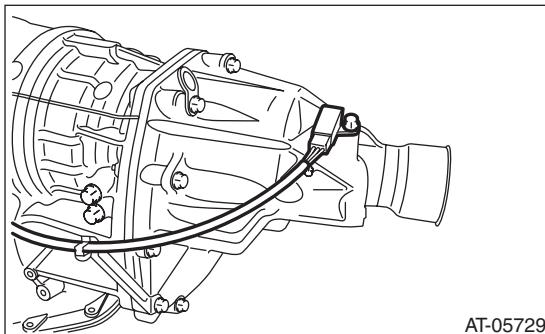

AT-05729

- 3) Install the heat shield cover.


Tightening torque:

18 N·m (1.8 kgf-m, 13.3 ft-lb)

- 4) Tighten the bolts which install front exhaust pipe to rear exhaust pipe.

Tightening torque:

18 N·m (1.8 kgf-m, 13.3 ft-lb)

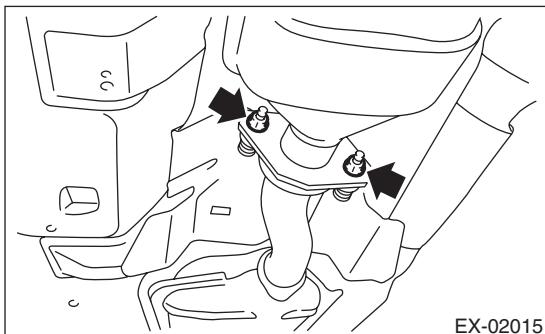

EX-02015

- 5) Lower the vehicle.