


## 23. Drive Plate

### A: REMOVAL

- 1) Remove the transmission assembly from the vehicle. <Ref. to 5AT-40, REMOVAL, Automatic Transmission Assembly.>
- 2) Use the ST to lock the crankshaft, and remove the drive plate.

ST 498497100 CRANKSHAFT STOPPER

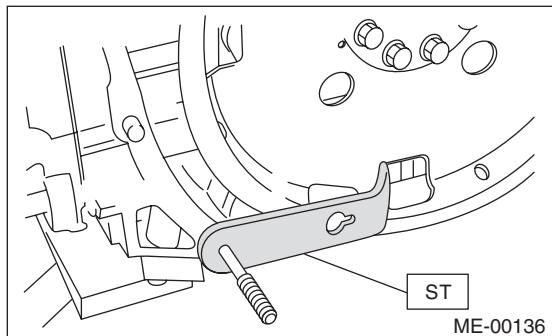


ME-00136

### B: INSTALLATION

- 1) Temporarily tighten the drive plate.
- 2) Using the ST, lock the crankshaft.

ST 498497100 CRANKSHAFT STOPPER

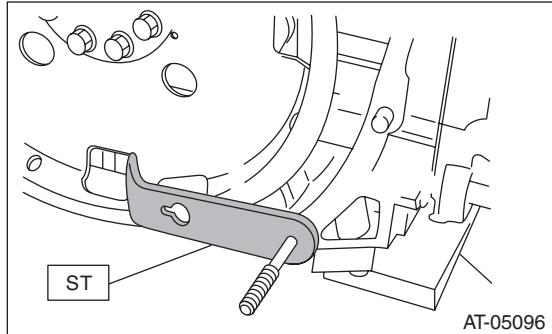

AT-05096

- 3) Tighten the drive plate to the specified torque.

**NOTE:**

Tighten the drive plate mounting bolts gradually.  
Each bolt should be tightened in a crisscross order.

***Tightening torque:***

**90 N·m (9.2 kgf·m, 66.4 ft-lb)**

- 4) Install the transmission assembly to the vehicle.  
<Ref. to 5AT-43, INSTALLATION, Automatic Transmission Assembly.>