

7. General Diagnostic Table

A: INSPECTION

Symptom	Possible cause	Corrective action
Select lever	Starter does not run.	Adjust the select cable, or inspect circuit.
	Back-up light does not illuminate.	Adjust the select cable, or inspect circuit.
	AT shift lock system does not operate normally.	Adjust the select cable, or inspect circuit.
	Will not change to manual or sports mode.	Inspect the mode change switch and select lever, or inspect the circuit.
	Up-shift is not engaged at manual mode.	Check the shift-up switch and circuit.
	Down-shift is not engaged at manual mode.	Check the shift-down switch and circuit.

General Diagnostic Table

CONTROL SYSTEMS

AUTOMATIC TRANSMISSION

5AT

	Page
1. General Description	2
2. Automatic Transmission Fluid	29
3. Differential Gear Oil	31
4. Road Test	32
5. Stall Test	33
6. Time Lag Test	35
7. Line Pressure Test	36
8. Transfer Clutch Pressure Test	38
9. Automatic Transmission Assembly	40
10. Transmission Mounting System	47
11. Extension Case Oil Seal	49
12. Differential Side Retainer Oil Seal	50
13. Inhibitor Switch	51
14. Front Vehicle Speed Sensor	52
15. Rear Vehicle Speed Sensor	54
16. Turbine Speed Sensor 1	55
17. Control Valve Body	56
18. Transmission Control Module (TCM)	58
19. ATF Cooler Pipe and Hose	59
20. Air Breather Hose	62
21. Oil Charge Pipe	63
22. Torque Converter Assembly	64
23. Drive Plate	65
24. Extension Case	66
25. Transfer Clutch	68
26. Rear Drive Shaft	70
27. Reduction Driven Gear	71
28. Center Differential Carrier	74
29. Parking Pawl	76
30. Converter Case	78
31. Oil Pump Cover	80
32. Drive Pinion Shaft Assembly	84
33. Front Differential Assembly	89
34. AT Main Case	95
35. Transmission Control Device	106