


13. Front Sub Sensor

A: REMOVAL

- 1) Turn the ignition switch to OFF.
- 2) Disconnect the ground cable from battery and wait for at least 60 seconds before starting work.
- 3) Remove the front bumper face. <Ref. to EI-22, FRONT BUMPER FACE, REMOVAL, Front Bumper.>
- 4) Remove the bolt, and then detach the front sub sensor.

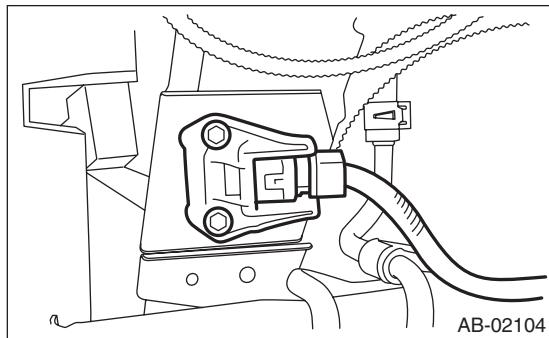

- 5) Disconnect the connector from front sub sensor.

B: INSTALLATION

CAUTION:

- Do not reuse the bolt and nut.
- Always use new bolts and nuts for them.

Install in the reverse order of removal.

Tightening torque:

13 N·m (1.32 kgf·m, 9.6 ft-lb)

C: INSPECTION

Check for the following, and replace the damaged parts with new parts.

- Front sub sensor and connector are damaged.
- Airbag is deployed.

AIRBAG SYSTEM (DIAGNOSTICS)

AB(diag)

	Page
1. Basic Diagnostic Procedure	2
2. Check List for Interview	3
3. General Description	4
4. Electrical Component Location	19
5. Airbag Connector	21
6. Airbag Control Module I/O Signal	22
7. Subaru Select Monitor	24
8. Read Diagnostic Trouble Code (DTC)	29
9. Inspection Mode	30
10. Clear Memory Mode	31
11. Airbag Warning Light Illumination Pattern	32
12. Airbag Warning Light Failure	33
13. List of Diagnostic Trouble Code (DTC)	37
14. Diagnostic Chart with Trouble Code	43