


Airbag Control Module I/O Signal

AIRBAG SYSTEM (DIAGNOSTICS)

6. Airbag Control Module I/O Signal

A: ELECTRICAL SPECIFICATION

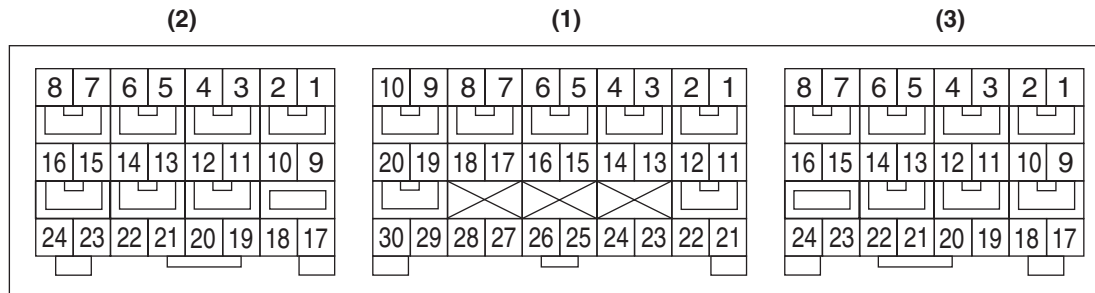

AB-01873

- Terminal numbers in airbag control module connector are shown in the figure.
- The airbag warning light illuminates when the connector is removed from the airbag control module.

Item		Control module terminal No.
Data link connector		(1) — 16
Combination meter		(1) — 11
Ignition power supply	Dedicated fuse	(1) — 21
Passenger's airbag module level one	+	(1) — 4
	—	(1) — 3
Passenger's airbag module level two	+	(1) — 1
	—	(1) — 2
Driver's airbag module level one	+	(1) — 5
	—	(1) — 6
Driver's airbag module level two	+	(1) — 8
	—	(1) — 7
Front sub sensor LH	+	(1) — 30
	—	(1) — 28
Front sub sensor RH	+	(1) — 29
	—	(1) — 27
Ground line (GND)		(1) — 25
		(1) — 26
Passenger's airbag OFF indicator		(1) — 17
Passenger's airbag ON indicator		(1) — 23
Passenger's seat belt warning light (integrated module)		(1) — 15
Seat belt pretensioner LH	+	(2) — 5
	—	(2) — 6
Side airbag sensor LH Curtain airbag sensor LH	+	(2) — 24
	—	(2) — 23
Side airbag module LH	+	(2) — 1
	—	(2) — 2
Seat position sensor LH	+	(2) — 9
	—	(2) — 17

Airbag Control Module I/O Signal

AIRBAG SYSTEM (DIAGNOSTICS)

Item		Control module terminal No.
Seat belt buckle switch LH	+	(2) — 10
	—	(2) — 18
Curtain airbag module LH	+	(2) — 4
	—	(2) — 3
Satellite safing sensor	+	(2) — 20
	—	(2) — 21
Seat belt pretensioner RH	+	(3) — 4
	—	(3) — 3
Side airbag sensor RH Curtain airbag sensor RH	+	(3) — 17
	—	(3) — 18
Side airbag module RH	+	(3) — 8
	—	(3) — 7
Curtain airbag module RH	+	(3) — 5
	—	(3) — 6
Occupant detection control module	+	(3) — 16
	—	(3) — 24

B: WIRING DIAGRAM

Refer to the WI section wiring diagram. <Ref. to WI-68, WIRING DIAGRAM, Airbag System.>