

1. General Description

A: SPECIFICATION

Refer to “Body Repair Manual” for general description of body structure, reference points and reference dimensions.

INSTRUMENTATION/DRIVER INFO



	Page
1. General Description	2
2. Combination Meter System	4
3. Combination Meter	11
4. Speedometer	12
5. Tachometer	13
6. Fuel Gauge	14
7. Engine Coolant Temperature Gauge	15
8. Warning box	16

