

## 2. Cruise Control Module

### A: NOTE

The control of cruise control system is carried out in engine control module (ECM).

Refer to engine section for removal and installation.

<Ref. to FU(H6DO)-51, Engine Control Module (ECM).>