


16. Antenna Amplifier

A: REMOVAL

- 1) Disconnect the ground cable from the battery.
- 2) Remove the rear gate trim. <Ref. to EI-52, REMOVAL, Rear Gate Trim.>
- 3) Disconnect the harness connectors and terminals.
- 4) Remove the screws and detach the antenna amplifier.

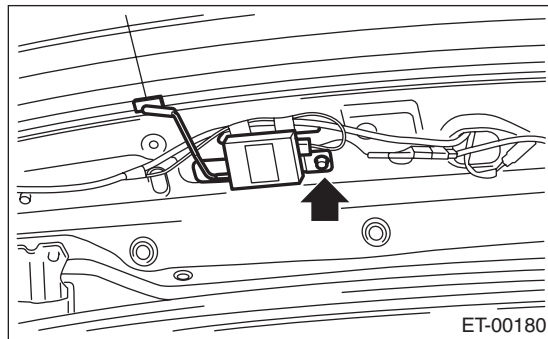


B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

Measure the resistance of antenna amplifier.

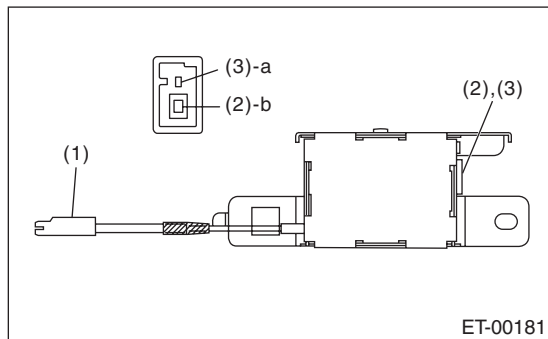

Terminal No.	Standard
(1) and amplifier body	10 k Ω or more
(2)-b and amplifier body	10 k Ω or more
(3)-a and amplifier body	10 k Ω or more