



12. Roof Rail

A: REMOVAL


- 1) Remove the roof rail cover front with the pawl (C) as a support point while removing clip (A) and pawl (B).

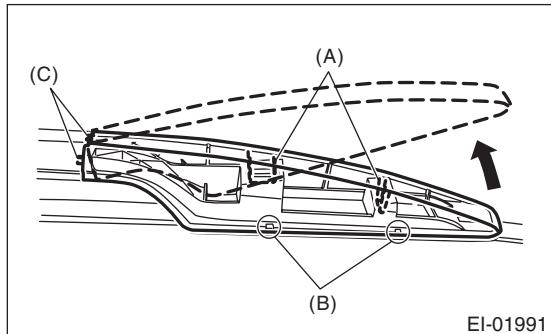

- 2) Remove the clips (A), and then remove the roof rail cover center.

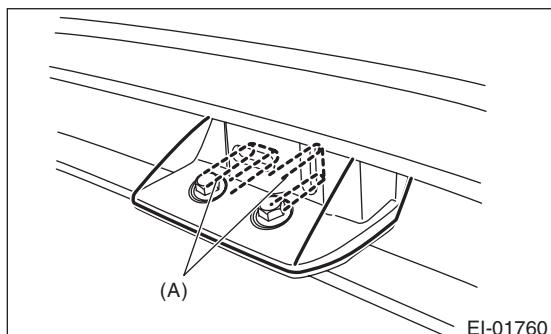

- 3) Remove the roof rail cover rear with the pawl (C) as a support point while removing clip (A) and pawl (B).

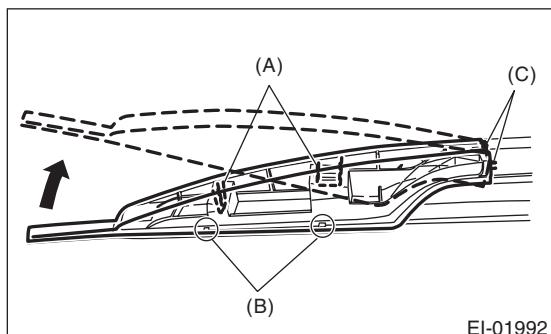

- 4) Remove the nuts and bolts, and remove the roof rail from the vehicle body.

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

7.5 N·m (0.76 kgf·m, 5.5 ft-lb)