


3. Fuel Tank Protector

A: REMOVAL

- 1) Lift up the vehicle.
- 2) Remove the bolts (A) and nuts (B), and then remove the fuel tank protector.

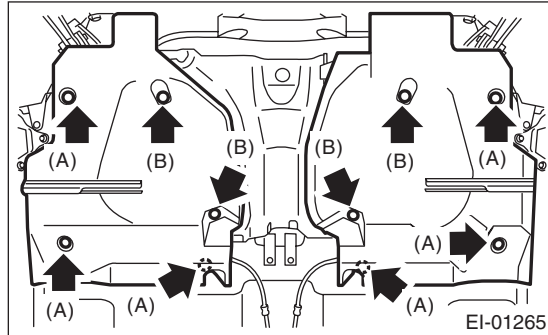

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

Refer to “**COMPONENT**” of “**General Description**”. <Ref. to EI-3, **UNDER PROTECTOR, COMPONENT, General Description.**>