



## 12. Rear Regulator and Motor Assembly

### A: REMOVAL

- 1) Remove the rear door glass. <Ref. to GW-17, REMOVAL, Rear Door Glass.>
- 2) Disconnect the motor connector.
- 3) Remove the four bolts and two nuts to remove the regulator assembly.

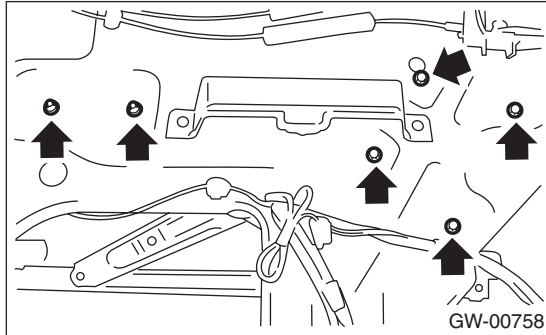

- 4) Remove the screws to remove the motor assembly.

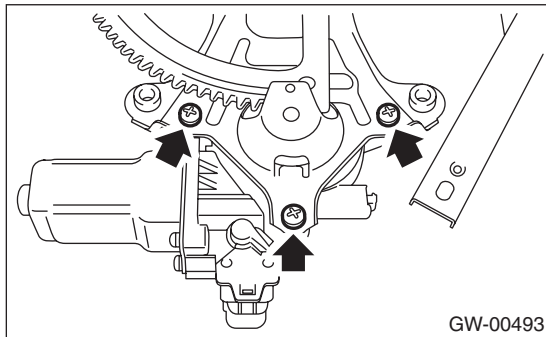

### B: INSTALLATION

Install in the reverse order of removal.

#### **Tightening torque:**

**Refer to “COMPONENT” of “General Description”.** <Ref. to GW-4, REAR DOOR GLASS, COMPONENT, General Description.>

### C: INSPECTION

- 1) Make sure that the power window motor rotates properly when the battery voltage is applied to the terminals of motor connector.
- 2) Change polarity of battery connection to terminals to ensure that the motor rotates in reverse direction.