


## 20. Rearview Mirror (RCD Model)

### A: REMOVAL


- 1) Disconnect the ground cable from battery.
- 2) Remove the harness cover (a) and connector cap (b).

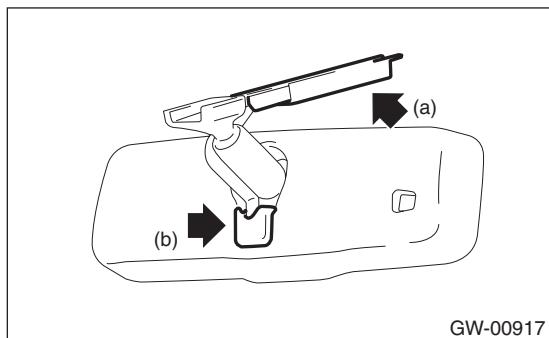

- 3) Disconnect the harness connector.
- 4) Remove the TORX® screw (1).
- 5) Slide the rearview mirror (2) to the upper side (A) of windshield glass (3), and remove the mirror from mount (4).

#### CAUTION:

- Be careful not to damage the mirror surface.
- Be careful not to damage the windshield glass.

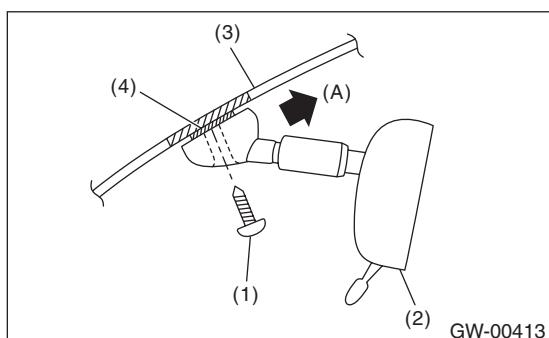

### B: INSTALLATION

#### CAUTION:

When tightening the mounting TORX® screw, be sure to observe the tightening torque. Otherwise, the mount may be damaged in over-torque conditions.

Install in the reverse order of removal.

#### Tightening torque:

Refer to "COMPONENT" of "General Description". <Ref. to GW-5, MIRROR, COMPONENT, General Description.>

### C: ADJUSTMENT

#### NOTE:

- When the rearview mirror (RCD model) is removed or replaced, perform calibration and zone setting by following the procedures below.
- The zone setting of the vehicle is set to zone "8" at factory setting.

#### 1. CALIBRATION

- 1) Before performing calibration, check the following items.
  - There is a sufficient distance from a big metal object or a building.
  - Vehicle is parked on a level surface.
  - The switch of unnecessary accessories (defogger, A/C system and light) is turned off.
  - All doors are closed.
- 2) Turn the ignition switch to "ON".
- 3) Hold down the multi-function button for nine to twelve seconds, and change the mode to the calibration mode. "C" is displayed on the screen.
- 4) Drive the vehicle in a circle until the display of "C" goes off. (Approx. two or three times)
- 5) Calibration is completed.
- 6) The mirror may not be able to perform the reading correctly. You can see this phenomenon only when the compass operates only to the specific direction. If you encountered this situation, go back to step 1) to perform adjustment again.

#### 2. ZONE SETTING

- 1) Refer to the compass zone map to check the zone number of area you use the vehicle.
- 2) By holding down the multi-function button for six to nine seconds, the vehicle enters to the zone setting mode. A zone number that is already set is displayed on the screen.
- 3) Push the multi-function button repeatedly until the zone number you want to set is displayed.

## Rearview Mirror (RCD Model)

### GLASS/WINDOWS/MIRRORS

4) If you leave the multi-function button for three seconds, the zone setting mode is completed.

