

9. Diagnostics with Phenomenon

A: INSPECTION

Symptoms	Problem parts
A/C system fails to operate.	• Fuse (F/B No. 7, 22, 31). • Connector (Poor contact) • Ground • Auto A/C control module • Blower fan motor • Blower fan relay • A/C relay • Compressor (Magnet clutch) • Evaporator sensor
Fuse is blown out.	• Fuse (F/B No. 7, 22, 31). • Connector (Poor contact)
Illumination cannot dim.	• Fuse (F/B No. 7, 22, 31). • Connector (Poor contact) • Illumination control switch • Auto A/C control module • Body integrated unit
Blower fan does not rotate or fan speed cannot be controlled.	• Fuse (F/B No. 22, 27, 28) • Connector (Poor contact) • Ground • Auto A/C control module • Blower fan motor • Blower fan relay • Power transistor or blower resistor
Unable to switch suction vents.	• Connector (Poor contact) • Auto A/C control module • Intake door actuator
Unable to switch vents.	• Connector (Poor contact) • Auto A/C control module • Mode door actuator
Compartment temperature does not rise. (Warm air does not come out.)	• Connector (Poor contact) • Auto A/C control module • Air mix door actuator • In-vehicle sensor, ambient sensor, evaporator sensor and sun-load sensor • In-vehicle sensor aspirator hose • Aspirator body
Compartment temperature does not lower. (Cold air does not come out.)	• Connector (Poor contact) • Auto A/C control module • Air mix door actuator • A/C relay • Compressor (Magnet clutch) • Radiator fan motor • Radiator fan relay • In-vehicle sensor, ambient sensor, evaporator sensor and sun-load sensor • In-vehicle sensor aspirator hose • Aspirator body • Pressure switch
Compartment temperature is higher or lower than setting temperature.	• Auto A/C control module • Air mix door actuator • In-vehicle sensor, ambient sensor, evaporator sensor and sun-load sensor • In-vehicle sensor aspirator hose • Aspirator body

Diagnostics with Phenomenon

HVAC SYSTEM (AUTO A/C) (DIAGNOSTICS)

Symptoms	Problem parts
Compartment temperature does not quickly respond to setting temperature.	• Air mix door actuator • In-vehicle sensor, ambient sensor, evaporator sensor and sun-load sensor • In-vehicle sensor aspirator hose • Aspirator body
Radiator fan does not rotate during A/C operation.	• Radiator fan motor • Radiator fan relay • ECM • A/C switch • Auto A/C control module
Seat heater does not run.	• Seat thermistor • Seat heater relay • Seat heater • Auto A/C control module • Front control panel

AIRBAG SYSTEM

AB

	Page
1. General Description	2
2. Airbag Connector	8
3. Inspection Locations After a Collision	11
4. Driver's Airbag Module	14
5. Passenger's Airbag Module	15
6. Side Airbag Module	16
7. Curtain Airbag Module	18
8. Airbag Control Module	19
9. Side Airbag Sensor	20
10. Curtain Airbag Sensor	21
11. Satellite Safing Sensor	22
12. Roll Connector	23
13. Front Sub Sensor	24