

Heater Vent Duct


HVAC SYSTEM (HEATER, VENTILATOR AND A/C)

27.Heater Vent Duct

A: REMOVAL

1. INSTRUMENT

- 1) Remove the instrument panel. <Ref. to EI-37, REMOVAL, Instrument Panel Lower Cover.>
- 2) Remove the screws and detach the center vent duct (A).
- 3) Remove the screws and detach the side vent duct (B).
- 4) Remove the screws and detach the side defroster duct (C).

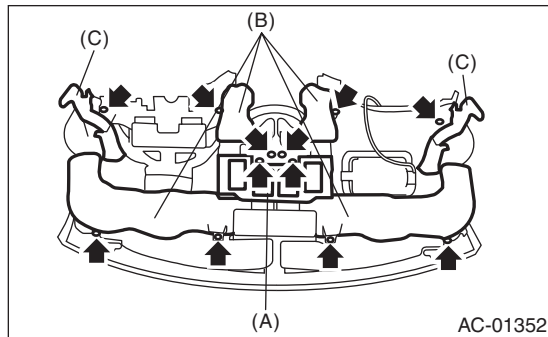

2. ROOF DUCT

Remove the roof trim. <Ref. to EI-51, REMOVAL, Roof Trim.>

NOTE:

The roof duct is one piece with the roof trim. If it requires replacement, replace the roof trim.

B: INSTALLATION

Install in the reverse order of removal.