

## 7. Clear Memory Mode

### A: OPERATION

#### 1. ECM

- 1) On the «Main Menu» display, select {Each System Check}.
- 2) On the «System Selection Menu», select {Engine Control System}.
- 3) After engine type information is displayed, select [OK].
- 4) On the «Engine Diagnosis», select {Clear Memory}.
- 5) When “Done” is displayed on the display screen, end the Subaru Select Monitor and turn the ignition switch to OFF.

NOTE:

- Initial diagnosis of electronic throttle control is performed after memory clearance. Wait for 10 seconds or more after turning the ignition switch to ON, and then start the engine.
- For detailed operation procedure, refer to the “PC application help for Subaru Select Monitor”.

#### 2. BODY INTEGRATED UNIT

- 1) On the «Main Menu» display, select {Each System Check}.
- 2) On the «System Selection Menu», select {Integ. Unit Mode}.
- 3) After {Integ. Unit Mode} is displayed, select [OK].
- 4) On the «Integ. unit mode», select {Clear Memory}.
- 5) When “Done” is displayed on the display screen, end the Subaru Select Monitor and turn the ignition switch to OFF.

NOTE:

For detailed operation procedure, refer to the “PC application help for Subaru Select Monitor”.