

6. Fuel Gauge

A: SPECIFICATION

Since the visor assembly cannot be disassembled,
do not remove or inspect the fuel gauge as alone.
(Do not remove the cover on the back surface.)