


## 16. Front Side Marker Light Bulb

### A: REMOVAL

- 1) Open the front hood.
- 2) Turn the socket (A) and remove the front turn signal light bulb.

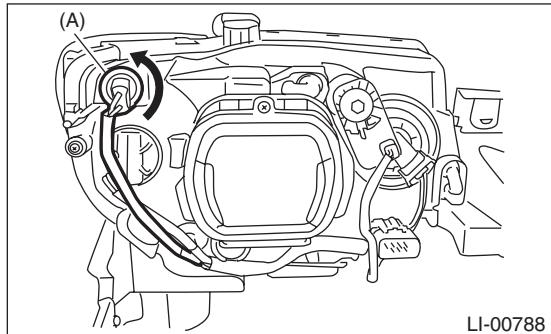

### B: INSTALLATION

Install in the reverse order of removal.

### C: INSPECTION

- 1) Visually check the bulb for blow out.
- 2) Check the bulb specification.  
<Ref. to LI-2, SPECIFICATION, General Description.>
- 3) If NG, replace the bulb with a new part.