


## 19. Side Turn Signal Light Assembly

### A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the mirror. <Ref. to GW-15, REPLACEMENT, Outer Mirror.>
- 3) Remove the scalp cap. <Ref. to GW-13, REPLACEMENT, Scalp Cap.>
- 4) Remove the 2 mounting screws, disconnect the harness connector and then remove the side turn signal light assembly.

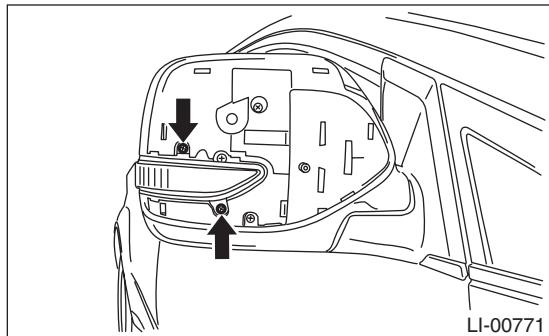

### B: INSTALLATION

Install in the reverse order of removal.

#### *Tightening torque:*

$0.8 \text{ N}\cdot\text{m} (0.08 \text{ kgf}\cdot\text{m}, 0.59 \text{ ft-lb})$

### C: INSPECTION

- 1) Install the side turn signal light assembly and check that it blinks normally.
- 2) If it does not blink normally, replace the side turn signal light assembly with a new part.

#### NOTE:

Because a LED (Light Emitting Diode) is used for the side turn signal light, replace the side turn signal light as an assembly if the LED went out.