


## 24.Rear Finisher Light Assembly


### A: REMOVAL

1) Remove the bulb inspection cover (A) of the rear gate trim.

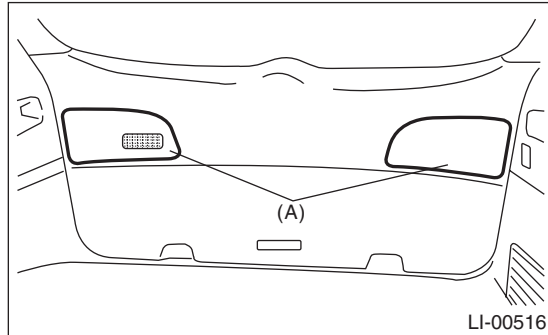

2) Disconnect the harness connector.

3) Remove the mounting nuts and detach the rear finisher assembly.

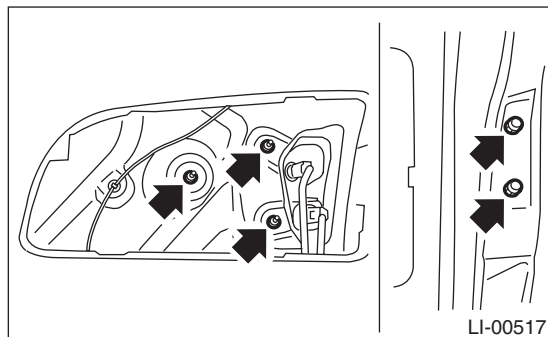

### B: INSTALLATION

Install in the reverse order of removal.

**Tightening torque:**

**4.5 N·m (0.46 kgf-m, 3.3 ft-lb)**