


## 28. High-mounted Stop Light

### A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the roof spoiler. <Ref. to EI-31, REMOVAL, Roof Spoiler.>
- 3) Remove the cap and screws, then detach the high-mounted stop light.

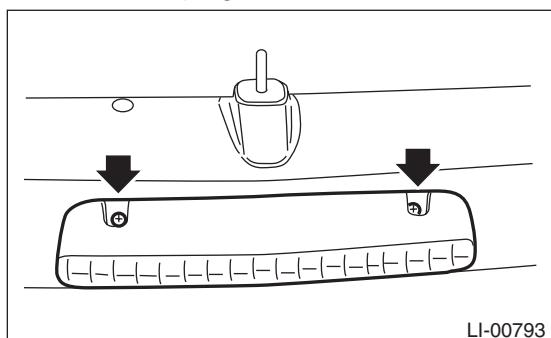

### B: INSTALLATION

Install in the reverse order of removal.

***Tightening torque:***

***1.5 N·m (0.15 kgf·m, 1.1 ft-lb)***

### C: INSPECTION

- 1) Install the high-mounted stop light to test if it illuminates normally.
- 2) If the high-mounted stop light does not illuminate, replace it with a new one.

**NOTE:**

Because LEDs (Light Emitting Diodes) are used for the high-mounted stop light, replace the high-mounted stop light as an assembly if the LEDs went out.