



35. Ignition Switch Illumination

A: REMOVAL

- 1) Disconnect the ground cable from the battery.
- 2) Remove the screws, and detach the upper column cover and lower column cover.

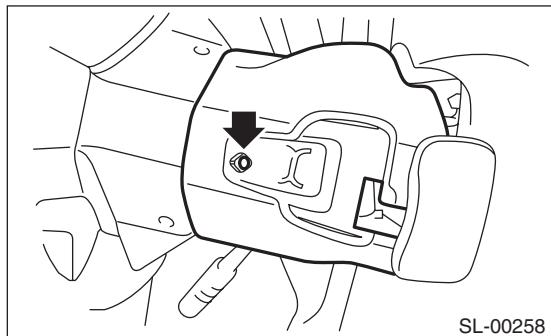

- 3) Disconnect the ignition switch illumination connector (A).
- 4) Turn the ignition switch illumination connector to the left and disconnect it.

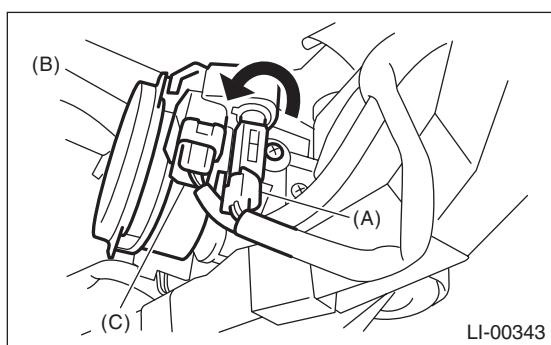

- (A) Ignition switch illumination connector
- (B) Ignition switch illumination
- (C) Immobilizer antenna connector

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

Step	Check	Yes	No
1 CHECK THE IGNITION SWITCH ILLUMINATION. Make sure the ignition switch illumination illuminates when driver's side door is open.	Does the ignition switch illumination illuminate?	Ignition switch illumination is normal. Go to step 2.	
2 CHECK THE IGNITION SWITCH ILLUMINATION. Make sure the ignition switch illumination blinks when the ignition switch is turned to ON.	Does the ignition switch illumination blink?	Check the function setting of the body integrated unit. <Ref. to LAN(diag)-2, Basic Diagnostic Procedure.>	Check the ignition switch illumination circuit. <Ref. to SL-23, CHECK IGNITION SWITCH ILLUMINATION, INSPECTION, Keyless Entry System.>