


36.Day Time Running Light Unit

A: REMOVAL

- 1) Remove the instrument panel lower cover. <Ref. to EI-37, REMOVAL, Instrument Panel Lower Cover.>
- 2) Remove the fuse box and disconnect the connector.
- 3) Remove the mounting nuts, and detach the day-time running light module.

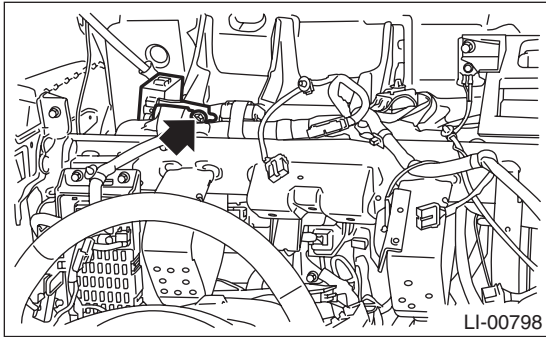

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

7.5 N·m (0.76 kgf-m, 5.5 ft-lb)