


## 14. Rear Gate Latch Assembly

### A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the rear gate trim. <Ref. to EI-52, REMOVAL, Rear Gate Trim.>
- 3) Disconnect the harness connector of rear gate latch assembly.
- 4) Remove the two screws.

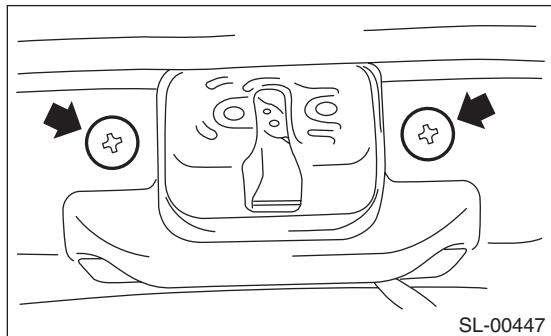

- 5) Remove the rear gate latch assembly.

### B: INSTALLATION


Install in the reverse order of removal.

#### *Tightening torque:*

*<Ref. to SL-3, REAR GATE LOCK, COMPONENT, General Description.>*

### C: INSPECTION

- 1) Disconnect the rear gate lock actuator harness connector.
- 2) Connect the battery to rear gate lock actuator terminals.

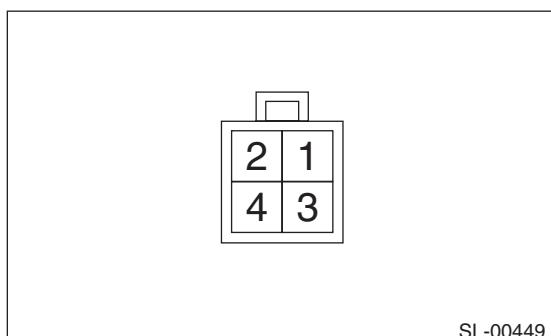

Terminal No.	Actuator operation
No. 1 (+) and No. 2 (-)	Lock → Unlock

Replace the rear gate latch assembly if faulty.