

## 22.Keyless Buzzer

### A: REMOVAL

- 1) Disconnect the ground cable from the battery.
- 2) Remove the keyless buzzer installed to the backside of radiator bracket.

### B: INSTALLATION

Install in the reverse order of removal.

### C: INSPECTION

Install the keyless buzzer to another vehicle which operates keyless buzzer normally, check the buzzer sounds. If NG, replace the keyless buzzer.