


Sunshade

SUNROOF/T-TOP/CONVERTIBLE TOP (SUNROOF)


7. Sunshade

A: REMOVAL

- 1) Remove the glass lid. <Ref. to SR-5, REMOVAL, Glass Lid.>
- 2) Loosen the TORX® bolt to remove the front sunshade bracket.

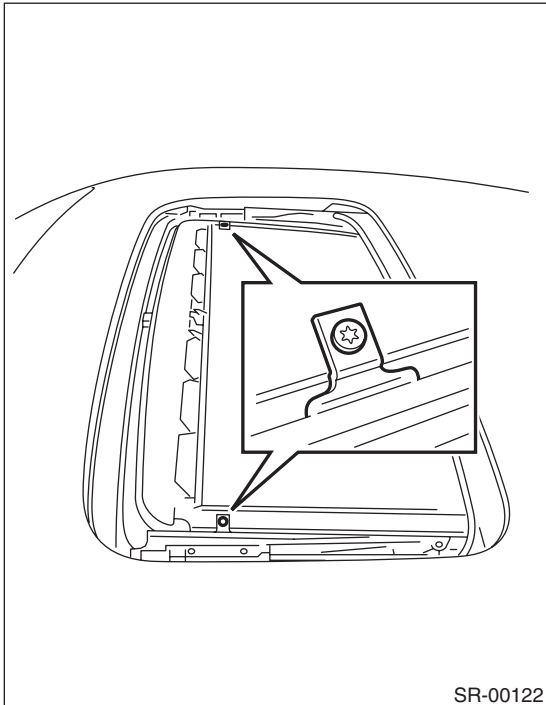

- 3) Pull the sunshade until the rear sunshade bracket comes into the sight, then loosen the TORX® bolts to remove the sunshade.

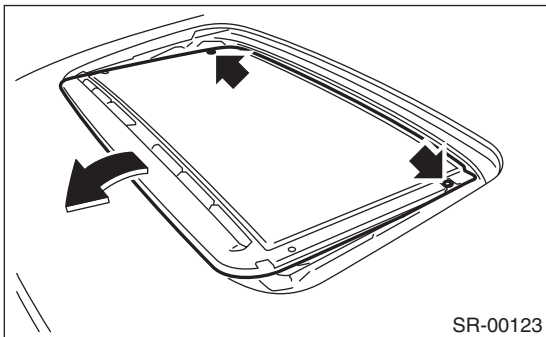


B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

1. CHECK FOR MOVING LOAD OF SUNSHADE

- 1) Attach a spring scale to sunshade edge using a cloth.

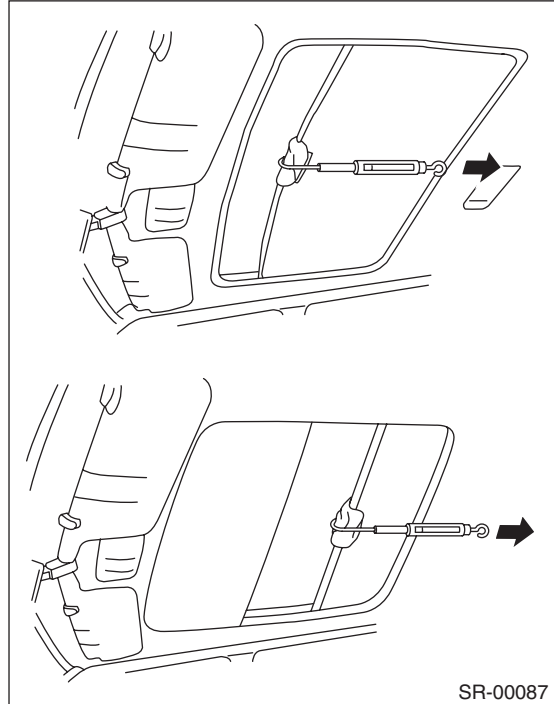

- 2) Pull the spring scale to measure moving load of the sunshade.

Moving load of sunshade:

Specification

$18.0 \pm 5.0 \text{ N}$ ($1.8 \pm 0.5 \text{ kgf}$, $13 \pm 3.7 \text{ lbf}$)

NOTE:

Moving load is larger at the beginning of pulling a spring scale, so take a spring scale reading while sunshade sliding smoothly.

- 3) If moving load exceeds specifications, check the glass lid, sunshade and frame assembly for improper installation.

EXTERIOR/INTERIOR TRIM



	Page
1. General Description	2
2. Front Under Cover	18
3. Fuel Tank Protector	19
4. Mud Guard	20
5. Front Grille	21
6. Front Bumper	22
7. Rear Bumper	29
8. Cowl Panel	30
9. Roof Spoiler	31
10. Side Garnish	32
11. Roof Molding	34
12. Roof Rail	35
13. Door Trim	36
14. Instrument Panel Lower Cover	37
15. Glove Box	38
16. Console Box	39
17. Center Console	40
18. Instrument Panel Assembly	41
19. Side Trim	44
20. Rear Quarter Trim	46
21. Floor Mat	48
22. Sun Visor	49
23. Assist Grip	50
24. Roof Trim	51
25. Rear Gate Trim	52
26. Heat Shield Cover	53
27. Trailer Hitch	54